

品番 TY-CSP1

360 度カメラスピーカーフォン

AV0923GU0 -FJ
Printed in Taiwan

DPQW1557ZA/X1

追加付属品の確認

取扱説明書に記載の付属品に加えて、以下の付属品が入っていることを確認してください。

ケーブルロック金具 (DPVF4719ZA/X1)	1
レンズカバー (DPVF4720ZA/X1)	1
ネジ (M2.6 × 12) (DPVF4721ZA/X1)	1
ケーブルタイ (DPVF4722ZA/X1)	4

お願い

- 乳幼児の手の届かないところに、適切に保管してください。
- 付属品の品番は予告なく変更する場合があります。(上記品番と実物の品番が異なる場合があります。)
- 付属品を紛失された場合は、お買い上げの販売店へご注文ください。(サービスルート扱い)
- 包装材料は商品を取り出したあと、適切に処理してください。

お知らせ

- 本機および同梱ケーブルは、Alternate Mode を利用した映像・音声出力には対応していません。

ケーブルロック金具の取り付け / 取り外し

ケーブルロック金具は、本体からの電源ケーブルおよびUSBケーブルの抜け防止を強化したい場合にお使いください。

- 固定した状態でコネクタやケーブルを強い力で引っ張らないでください。断線等、破損の原因になります。
- ケーブルロック金具は、付属のケーブルと組み合わせてお使いください。付属のケーブル以外では固定できない場合があります。

■ 取り付け方


1 ケーブルロック金具を本体に取り付ける。

- 本体のセキュリティケーブル取り付け穴に、ケーブルロック金具の丸穴が来るように設置してください。
- 付属のねじ (M2.6 mm、長さ 12 mm) を使用して、ケーブルロック金具を本体にしっかり取り付けます。(締め付けトルクの目安: 0.3 N・m)




2 電源ケーブルもしくは USB ケーブルを本体に差し込む。

- 確実に奥まで挿入してください。

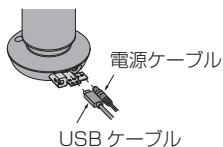


3 付属のケーブルタイで、それぞれのケーブルを固定する。

- C to C ケーブルを固定する場合は、図①側の穴にケーブルタイを通し、C to A ケーブルを固定する場合は、図②側の穴にケーブルタイを通します。

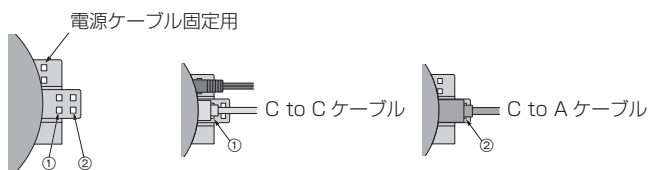


(1) ケーブルタイを上側からケーブルロック金具の穴に通し、緩みなくしっかりと固定する。

- 何度か左右に引っ張って締めつけます。

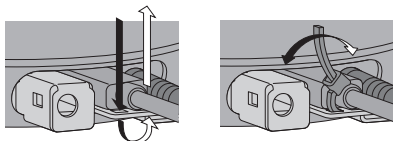


(2) 余ったケーブルタイの先端部を切断する。

- 図は、C to A ケーブルを固定する場合の例です。電源ケーブルや C to C ケーブルの場合も同様に固定してください。



4 セキュリティケーブルを取り付ける。


- 取り付け面φ 11 mm以下の Noble Wedge スロット対応のセキュリティケーブルを接続できます。

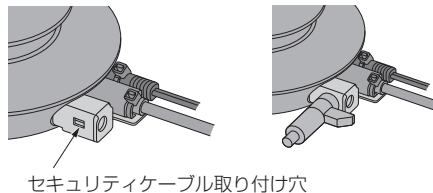


■ 取り外し方

1 ケーブルタイを取り外す。

- 付属のケーブルタイは繰り返し利用できません。一度締結したものを取り外す場合は、ニッパー等で切断してください。その際ケーブルを傷つけないように注意してください。
- ケーブルロック金具の裏面からニッパー等で切断すると、ケーブルを傷つけずに切断することができます。

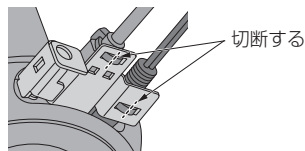


2 本体から電源ケーブルおよび USB ケーブルを抜く。

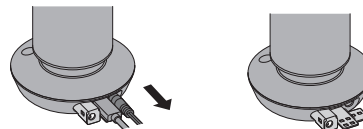

3 ケーブルロック金具を本体から取り外す。

- 図のように、本体とケーブルロック金具を固定しているねじを外し、ケーブルロック金具を取り外す。

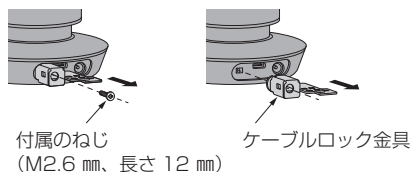

レンズカバーの取り付け / 取り外し


レンズカバーは、物理的なシャッターとしてお使いください。

- レンズカバーは、セキュリティ対策の観点から物理的なシャッターとして付属するものです。簡易的なレンズ保護としてもお使い頂けますが、落下・転倒時における無破損・無故障を担保するものではありません。

■ 取り付け方

図のようにレンズカバーを本体に取り付ける。


- レンズカバーの回転方向の向きに指定はありません。
- カメラのレンズに手が触れないように気を付けてください。
- 本体を持ち上げるときは、レンズカバー部のみをつかまないでください。レンズカバーが外れて本体が落下する可能性があります。

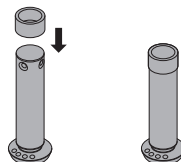

■ 取り外し方

図のようにレンズカバーを本体から取り外す。

- 取り外すときは、レンズカバーを強くつかまないでください。強くつかむと、摩擦が増し、外れにくくなります。
- カメラのレンズに手が触れないように気を付けてください。

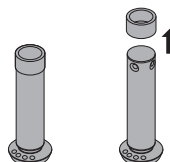

Checking additional supplied accessories

In addition to the accessories described in the operating instructions, confirm that the following accessories are also included.

Cable lock fitting (DPVF4719ZA/X1)	1
Lens cover (DPVF4720ZA/X1)	1
Screw (M2.6 × 12) (DPVF4721ZA/X1)	1
Cable tie (DPVF4722ZA/X1)	4

Attention

- Store small parts in an appropriate manner, and keep them away from young children.
- The part numbers of accessories are subject to change without notice.
(The actual part number may differ from the ones shown above.)
- In case you lost accessories, please purchase them from your dealer. (Available from the customer service)
- Dispose the packaging materials appropriately after taking out the items.

Note

- This product and the cables included do not support output of images and audio using the Alternate Mode.

Fitting and removing the cable lock fitting


Use the cable lock fitting when you want to make it harder to unplug the power supply cable and USB cable from the main unit.

- Do not pull strongly on the connectors or cables while they are attached. This may cause cable breakage or damage, etc.
- Use the cable lock fitting together with the supplied cables. It may not be possible to secure with cables other than the supplied ones.

How to fit


1 Fit the cable lock fitting to the main unit.

- Insert the cable lock fitting so the round hole goes to the main unit's hole for attaching security cable.
- Use the supplied screw (M2.6 mm, 12 mm long) to firmly secure the cable lock fitting to the main unit. (Approximate tightening torque: 0.3 N · m)

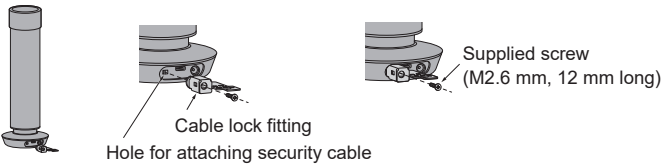


2 Insert the power supply cable and USB cable into the main unit.

- Push in firmly all the way.

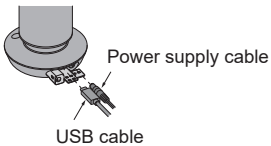


3 Use the supplied cable ties to secure each of the cables.

- When securing the C to C cable, pass the cable tie through hole ① in the diagram. When securing a C to A cable, pass the cable tie through hole ② in the diagram.

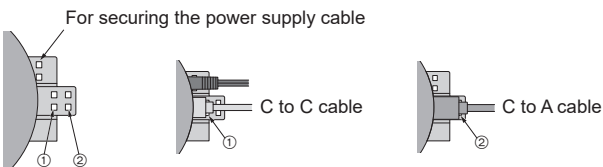


(1) Pass the cable tie down from above through the hole in the cable lock fitting, then secure firmly so there is no looseness.

- Pull a few times both ways to tighten.

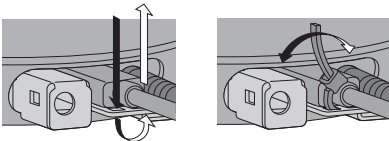


(2) Cut off the end of the leftover cable tie.

- The diagram is an example of securing the C to A cable. Secure the power supply cable and C to C cable in the same way.



4 Attach the security cable.


- You can connect a security cable that is compatible with Noble Wedge slots with mounting surfaces of 11 mm diameter or less.

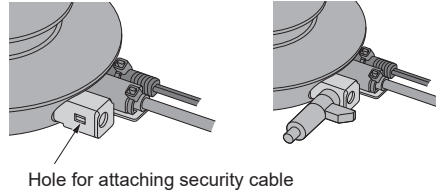


How to remove

1 Remove the cable ties.

- The supplied cable ties are not reusable. To remove ties that have been connected once, cut with a pair of nippers, etc. Take care not to damage the cables when doing this.
- You can cut the cable ties without damaging the cables by cutting with a pair of nippers, etc., on the back of the cable lock fitting.

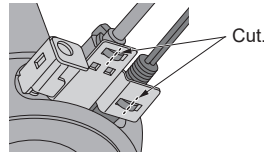


2 Unplug the power supply cable and USB cable from the main unit.

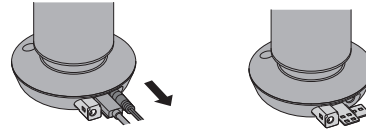

3 Detach the cable lock fitting from the main unit.

- As shown in the diagram, remove the screw securing the cable lock fitting to the main unit and detach the cable lock fitting.

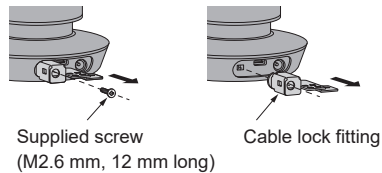

Attaching and detaching the lens cover


Use the lens cover as a physical shutter.

- The lens cover is supplied as a physical shutter from a security perspective. It may be used as a way of easily protecting the lenses, but it is not designed to completely protect against damage and malfunction if the main unit is dropped or toppled.

How to fit

Put the lens cover on the main unit as shown in the diagram.

- There is no specific direction that the lens cover should face.
- Take care not to touch the lenses of the cameras with your hands.
- When lifting the main unit, do not lift only with the lens cover part. It is possible for the lens cover to come off and the main unit to fall.

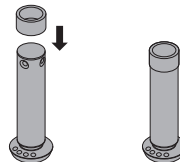

How to remove

Take the lens cover off the main unit as shown in the diagram.

- When taking off, do not hold the lens cover too firmly. Holding it firmly will increase friction and make it more difficult to remove.
- Take care not to touch the lenses of the cameras with your hands.

