

AW-PH650N 補足説明

この冊子は、使用機器に関する注意事項と、取扱説明書に記載されている構成部品を補足説明しています。
取扱説明書とあわせてお読みください。

■設置前のお願い

AW-PH650には、本体部（回転台）やハウジング部に機能切換スイッチがあります。

設置完了後では切り換えが難しい場合がありますので、設置する前に、取扱説明書の①ケーブル補償回路の設定（16ページ）、②CPU基板のスイッチ設定（17ページ）、③ハウジング内のカメラ制御切換スイッチの設定（26ページ）および下記をご参照のうえ、使用状態に合わせたスイッチ設定に切り換えてください。


●LENS I/F(2) 制御切換スイッチ [初期設定：Fujinon]

使用するレンズに合わせてLENS I/F(2) 制御切換スイッチを切り換えてください。

Fujinon：フジノン（株）製RDレンズ

Canon：キャノン（株）製IASレンズ、WASレンズ、VASレンズ

LENS I/F(2)制御切換スイッチ

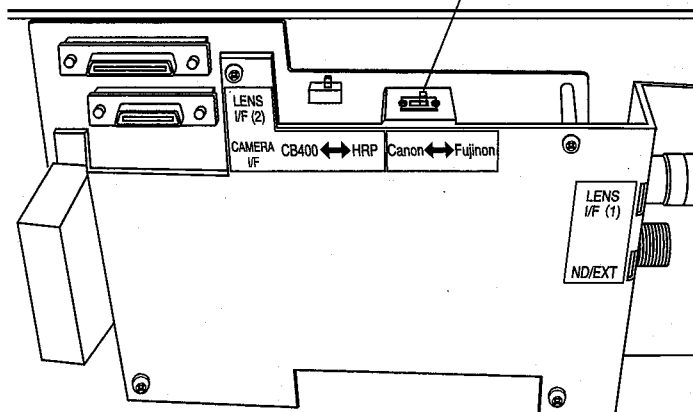

■AK-HC910を使用する場合の注意事項

AK-HC910は、HD-SDI信号とY/PB/PR信号が出力可能ですが、Y/PB/PR信号を本線として使用する場合は、SDI IN/OUT端子は接続しないでください。

HD-SDI信号を本線として使用する場合のみ、SDI OUT端子を接続してください。

■AK-HC1500をAW-CB400から制御する場合の注意事項

AK-HC1500は、AK-HRP150のプロトコルおよびAW-CB400のプロトコルに対応していますが、出荷時はAK-HRP150のプロトコルに設定されています。AW-CB400を使ってAK-HC1500を制御する場合は、以下の手順に従い、AK-HC1500のプロトコルをAK-HRP150からAW-CB400に切り換えてください。

●設置前にプロトコルを切り換える場合

AK-HC1500の取扱説明書を参照し、プロトコルを切り換えてください。

●設置後にプロトコルを切り換える場合

- ①AW-PH650Nの取扱説明書に従って設置します。
- ②カメラハウジングの上カバー開閉ボルト（2箇所）を緩め、上カバーを開けます。
- ③ACアダプター部の電源スイッチをONにします。
- ④AK-HC1500の電源がONになりましたら、AK-HC1500の取扱説明書を参照し、プロトコルを切り換えます。
(SETTINGメニューの「PROTOCOL」を「4」に切り換えます。)
- ⑤ACアダプター部の電源スイッチをOFFにします。

■構成品の詳細

●下記の付属品をご確認ください。

	品名	数量	仕様
1	電源ケーブル	1	約30 m
2	マルチケーブル	1	約10 m
3	カメラケーブル	1	コンバーチブルカメラ用
4	カメラケーブル	1	AK-HC900シリーズ用
5	カメラケーブル	1	AK-HC1500用
6	レンズ保持金具	1	大型レンズ用
7	保持金具用ねじ	2	M5用、M6用
8	保持金具用ワッシャ	2	φ6
9	レンズ用ヒモ	1	約85 cm
10	カメラ取付スペーサ	1	
11	取付スペーサ用ねじ	4	1/4インチ、長さ13 mm
12	取付スペーサ用ワッシャ	4	φ6
13	位置決めねじ	1	M5、長さ 8 mm
14	ACアダプタ支柱取付板	1	
15	支柱取付板用ねじ	4	M8、長さ14 mm
16	支柱用取付板用ワッシャ	8	φ8
17	六角レンチ	3	M5用、M6用、M8用
18	ハウジング載せフレーム	1	
19	載せフレーム用ねじ	4	M5、長さ 30 mm
20	載せフレーム用ワッシャ	8	φ5
21	フィルター	1	
22	束線バンド	5	約100 mm

Additional instructions for AW-PH650N

This booklet contains some additional precautions relating to the equipment used as well as some more details on the constituent parts given in the operating instructions. Read it alongside the operating instructions.

■ Steps to be taken prior to installation

The AW-PH650 has function selector switches on its main unit (pan/tilt head) and housing.

Since it may prove difficult to change the positions of these switches after installation, refer to ① cable compensation circuit settings (page 15), ② CPU circuit board switch settings (page 16) and ③ settings of the camera control selector switch inside the housing (page 25) in the Operating Instructions as well as to the information below prior to installation.

Then set the switches to the positions that correspond to the operating conditions.


● LENS I/F (2) control selector switch [initial setting: Fujinon]

Set the LENS I/F (2) control selector switch to the position that corresponds to the lens used.

Fujinon: RD lens made by Fujinon

Canon: IAS lens, WAS lens or VAS lens made by Canon

LENS I/F (2) control selector switch

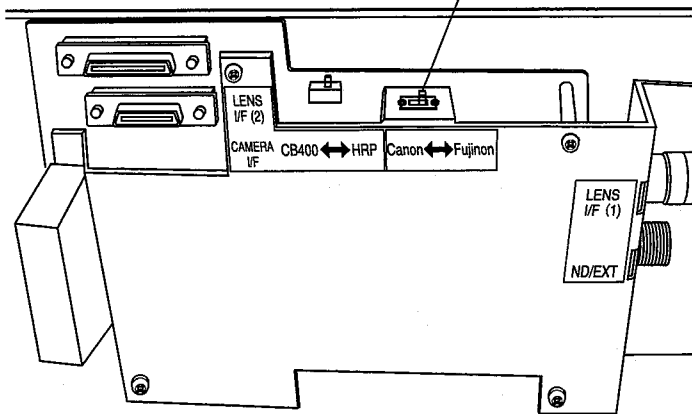

■ Precautions when using the AK-HC910

The AK-HC910 is capable of outputting HD-SDI signals and Y/PB/PR signals, but when the Y/PB/PR signals are used as the main line, do not connect any signals to the SDI IN/OUT connector.

Connect signals to the SDI OUT connector only when using HD-SDI signals as the main line.

■ Precautions when controlling the AK-HC1500 from the AW-CB400

The AK-HC1500 supports the AK-HRP150 protocol and AW-CB400 protocol, and it is the AK-HRP150 protocol which was set before the AK-HC1500 was shipped from the factory. When controlling the AK-HC1500 using the AW-CB400, follow the steps below to change the protocol setting of AK-HC1500 from AK-HRP150 to AW-CB400.

● When changing the protocol before installation

Refer to the operating instructions of the AK-HC1500, and change the protocol.

● When changing the protocol after installation

- ① Proceed with the installation following the steps given in the operating instructions of the AW-PH650N.
- ② Loosen the two top cover open/close bolts of the camera housing, and open the top cover.
- ③ Set the power switch of the AC adapter to ON.
- ④ When the power of the AK-HC1500 has been turned on, refer to the operating instructions of the AK-HC1500, and change the protocol. (Change the PROTOCOL setting on the SETTING menu to "4.")
- ⑤ Set the power switch of the AC adapter to OFF.

■ Details of constituent parts

● Check the following accessories supplied.

	Product	QTY	Specification
1	Power cable	1	Approx. 98.4 ft. (30 m)
2	Multi cable	1	Approx. 32.8 ft. (10 m)
3	Camera cable	1	For convertible camera
4	Camera cable	1	For AK-HC900 series
5	Camera cable	1	For AK-HC1500
6	Lens holder	1	For a large lens
7	Screws for lens holder	2	For M5 and M6
8	Washers for lens holder	2	ø6
9	String	1	Approx. 2.8 ft. (85 cm)
10	Camera mounting spacer	1	
11	Screws for camera mounting spacer	4	1/4", length: 13 mm
12	Washers for camera mounting spacer	4	ø6
13	Positioning screw	1	M5, length: 8 mm
14	Pole mounting plate (AC adapter)	1	
15	Screws for pole mounting plate	4	M8, length: 14 mm
16	Washers for pole mounting plate	8	ø8
17	Allen keys	3	For M5, M6 and M8
18	Housing mount frame	1	
19	Screws for housing mount frame	4	M5, length: 30 mm
20	Washers for housing mount frame	8	ø5
21	Filter	1	
22	Cable ties	5	Approx. 100 mm