

Panasonic®

取扱説明書（設置編）

シーリングアレイマイクロホン 業務用

品番 WX-AM800



保証書別添付

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。

- 取扱説明書をよくお読みのうえ、正しく安全にお使いください。
- ご使用の前に「安全上のご注意」(6~8ページ) を必ずお読みください。
- 保証書は、「お買い上げ日・販売店名」などの記入を確かめ、取扱説明書とともに大切に保管してください。
- 本書では、設置のしかたについて説明しています。

本機の操作や設定のしかたは、以下のホームページから本製品の取扱説明書をダウンロードしてお読みください。

<https://partner.connect.panasonic.com/jp-ja/products-services>



PUQX1063YA

はじめに

はじめに

付属品をご確認ください

取扱説明書（本書）	1冊	天井取付用ねじ（短）（M4×8 mm）	8本
保証書	1式	コネクターカバー	1個
天井取付金具	2個	ねじ隠しシート	2枚
ブリッジ金具	2個	安全ワイヤー（約75 cm）	1本
固定金具	1個	アイボルト（M6）	4個
天井取付用ねじ（長）（M4×35 mm）	6本	型紙（天井取付用／埋込用）	各1枚

免責について

弊社はいかなる場合も以下に関して一切の責任を負わないものとします。

- ① 本商品に関連して直接または間接に発生した、偶発的、特殊、または結果的損害・被害
- ② お客様の誤使用や不注意による障害または本商品の破損など不便・損害・被害
- ③ お客様による本商品の分解、修理または改造が行われた場合、それに起因するかどうかにかかわらず、発生した一切の故障または不具合
- ④ 本商品の故障・不具合および設定・設置の誤りを含む何らかの理由または原因により、拡声ができないことなどで被る不便・損害・被害
- ⑤ 第三者の機器などと組み合わせたシステムによる不具合、あるいはその結果被る不便・損害・被害
- ⑥ 商品の不良・不具合以外の事由（取付工事の不備、建屋側取り付け面の不良などを含む）による落下などによる不便・障害・被害

取扱説明書に記載されていない方法や、指定の部品を使用しない方法で施工されたことにより事故や損害が生じたときには、当社では責任を負えません。また、その施工が原因で故障が生じた場合は、製品保証の対象外となります。

著作権について

GPL/LGPLその他に基づきライセンスされるオープンソースソフトウェアを除き、本製品に含まれるソフトウェアの譲渡、コピー、逆アセンブル、逆コンパイル、リバースエンジニアリングは禁じられています。また、本製品に含まれるすべてのソフトウェアの輸出法令に違反した輸出行為は禁じられています。

商標および登録商標について

- Audinate®、AudinateのロゴおよびDante®は、Audinate Pty Ltdの登録商標です。
- その他、本文中の社名や商品名は、各会社の商標または登録商標です。

Dante®について

Dante®とは、Audinate Pty Ltdが開発したプロトコルで、ギガビットイーサネット対応のネットワーク環境で、サンプリング周波数／ビットレートが違う複数のオーディオ信号や、機器のコントロール信号を同時に扱える特長を持っています。Dante®の詳細については、Audinate Pty Ltdのウェブサイトをご参照ください。
<http://www.audinate.com/>

Dante Controllerについて

Dante Controllerは、Dante®ネットワークの設定とオーディオのルーティングをするためのアプリケーションソフトです。本機のDante®ネットワークの設定にはDante Controllerを使います。Audinate Pty Ltdのウェブサイトをご参照ください。

オープンソースソフトウェアについて

本製品には下記オープンソースソフトウェアを使用しています。

[GPL/LGPL]

u-boot

glibc (2.26)

[GPL/LGPL以外]

libsodium (1.0.18)

zlib (1.2.11)

mDNSResponder (258.13)

Precision Time Protocol daemon (1b2)

本製品に含まれる第三者製ソフトウェアのライセンスについて

そのライセンスは、付録の【ライセンス文について】を参照して下さい。

本製品に含まれる第三者製ソフトウェアのライセンスについて

本製品の発売から少なくとも3年間、以下の問い合わせ窓口にご連絡いただいた方に対し、実費にて、GPL V2.0、LGPL V2.1、LGPL V3.0、またはソースコードの開示義務を課すその他の条件に基づきライセンスされたソフトウェアに対応する完全かつ機械読み取り可能なソースコードを、それぞれの著作権者の情報と併せて提供します。

問い合わせ窓口：oss-cd-request@gg.jp.panasonic.com

著作権等について

上記を除いて、本ソフトウェアの著作権、その他の無体財産権は、パナソニック エンターテインメント&コミュニケーション株式会社または第三者に帰属しており、お客様へは移転しません。

また、本ソフトウェアを使用した際に生じた障害、損失などに関して、弊社はいかなる責任も負いません。

ネットワークに関するお願い

本商品は電気通信事業者の電気通信回線設備に直接接続できません。

本商品はネットワークへ接続して使用するため、以下のような被害を受けることが考えられます。

- (1) 本商品を経由した情報の漏えいや流出
- (2) 悪意を持った第三者による本商品の不正操作
- (3) 悪意を持った第三者による本商品の妨害や停止

このような被害を防ぐため、お客様の責任の下、下記のような対策も含め、ネットワークセキュリティ対策を十分に行ってください。

- ファイアウォールなどを使用し、安全性の確保されたネットワーク上で本商品を使用する。
- コンピューターが接続されているシステムで本商品を使用する場合、コンピューターウイルスや不正プログラムの感染に対するチェックや駆除が定期的に行われていることを確認する。
- 不正な攻撃から守るため、必ずMicrophone System Configuration Centerで本機のパスワードを設定する。

VCCIについて

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

略称について

本書では、以下の略称を使用しています。

- シーリングアレイマイクロホン (WX-AM800) を本機またはシーリングアレイマイクまたはシーリングマイクと表記しています。
- ワイヤレスアンテナユニット (WX-AU202 : 別売品) をワイヤレスアンテナユニットと表記しています。
- ワイヤレスマイクロホン (WX-ST200、WX-ST210、WX-ST250、WX-ST400、WX-ST700:ともに別売品) とポータブルワイヤレス送信機 (WX-ST510 : 別売品)、卓上型ワイヤレス送信機 (WX-ST600 : 別売品) をワイヤレスマイクと表記しています。
- Microphone System Configuration Center をMic CCと表記しています。
- パーソナルコンピューターをPCと表記しています。
- Power over Ethernet をPoEと表記しています。
- レイヤ2スイッチをL2スイッチと表記しています。
- PoE給電対応レイヤ2スイッチをPoE給電L2スイッチと表記しています。
- Dante[®]をDanteと表記しています。

本文中に記載されている別売品などの情報は、2023年12月現在のものです。最新の情報は、お買い上げの販売店にお問い合わせください。

記号について

本書では、以下の記号を用いて説明しています。



重要 : 該当する機能を使用するにあたり、制限事項や注意事項が書かれています。



: 使用上のヒントが書かれています。

本製品について

■ 本機は業務用機器です。

■ 本製品（付属品含む）に表示の記号は以下を示しています。

— DC (直流)

もくじ

はじめに

はじめに.....	2
付属品をご確認ください.....	2
免責について.....	2
著作権について.....	2
商標および登録商標について.....	2
Dante®について	2
Dante Controllerについて	3
オープンソースソフトウェアについて	3
ネットワークに関するお願い.....	3
VCCIについて	3
略称について	4
記号について	4
本製品について	4
安全上のご注意.....	6

はじめに

設置・接続

設置のしかた.....	9
設置上のお願い.....	9
シーリングマイクの設置方法.....	10
天井取付	10
天井埋込	16
ワイヤー吊り下げ	22
VESAマウント金具取付	24
接続のしかた.....	26
PoE給電L2スイッチとの接続、Danteネットワーク との接続	26
制御ネットワークとの接続	27
ワイヤレスアンテナユニットとの接続	27

設置・接続

その他

外形寸法図.....	28
故障かな!?.....	29
仕様.....	30
保証とアフターサービス.....	31
付録・ライセンス文について.....	33

その他

安全上のご注意

必ずお守りください

はじめに

人への危害、財産の損害を防止するため、必ずお守りいただくことを説明しています。

■誤った使いかたをしたときに生じる危害や損害の程度を区分して、説明しています。



警告

「死亡や重傷を負うおそれがある内容」です。



注意

「軽傷を負うことや、財産の損害が発生するおそれがある内容」です。

■お守りいただく内容を次の図記号で説明しています。(次は図記号の例です)



してはいけない内容です。



実行しなければならない内容です。



警告



工事は販売店に依頼する

工事には技術と経験が必要です。火災、感電、けが、器物損壊の原因となります。

- 必ず販売店に依頼してください。

高所作業は資格者が行う

工事には技術と経験が必要です。火災、感電、けが、器物破損の原因となります。

- 必ず販売店に依頼してください。

設置の説明にしたがって天井にしっかりと取り付ける

けがや事故の原因となります。

専用の取付金具を使用する

落下によるけがや事故の原因となります。

ねじやボルトは指定されたトルクで締め付ける

落下によるけがや事故の原因となります。

取り付けねじはしっかりと締める

落下などでのけがの原因となります。

- 必ず販売店に依頼してください。

質量に耐える取り付けをする

落下や転倒によるけがや事故の原因となります。

- 十分な強度に補強してから取り付けてください。

落下防止対策を施す

落下によるけがの原因となります。

- 落下防止ワイヤー（安全ワイヤー）を必ず取り付けてください。

付属品・オプションは、指定の製品を使用する

本体に誤って指定外の製品を使用すると、火災や事故を起こす原因になります。

水滴または水沫のかからない状態で使用する

水などが中に入った場合、火災や感電の原因となります。

- 直ちに電源を切り、販売店に連絡してください。

⚠ 警告



外郭部にひびや割れが発生した場合は、使用をやめて取り外す

落下の原因となります。

- 必ず販売店に依頼してください。

異常があるときは、すぐ使用をやめる

煙が出る、においがする、外部が劣化するなど、そのまま使用すると火災・落下によるけが、器物破損の原因となります。

- 放置せずに、直ちに電源を切り、販売店に連絡してください。

配線は正しく行う

ショートや誤配線により、火災や感電の原因となります。

地震後は必ず点検する

本体取付部が損傷し、落下の原因となります。

- 必ず販売店に依頼してください。

定期的に点検する

金具やねじがさびると、落下によるけがや事故の原因となります。

- 点検は、販売店に依頼してください。

お手入れのときは電源を切る

感電の原因となります。

使用しなくなった、あるいは使用不可になった場合、放置せずに取り外す

種々の部品の腐食により、落下の原因となります。

- 必ず販売店に依頼してください。



電源を入れたまま工事、配線をしない

火災や感電の原因となります。

ケーブルなどは引っ張らない

火災や感電の原因となります。

ケーブルなどを傷つけない

重いものを載せたり、はさんだりすると、ケーブルが傷つき、火災や感電の原因となります。

異物を入れない

水や金属が内部に入ると、火災や感電の原因となります。

- 直ちに電源を切り、販売店に連絡してください。

雷のときは工事、配線をしない

火災や感電の原因となります。

可燃性ガスの雰囲気中で使用しない

爆発によるけがの原因となります。

塩害や腐食性ガスが発生する場所に設置しない

取付部が劣化し、落下によるけがや事故の原因となります。

湿気やほこりの多い場所に設置しない

火災や感電の原因となります。

安全上のご注意

⚠ 警告



禁止

ぶら下がらない、足場代わりにしない
けがや事故の原因となります。

振動する場所に取り付けない

振動で金具が破損し、落下によるけがや事故の原因となります。

油の付着しやすい場所に設置しない

取付部が劣化し、落下によるけがや事故の原因となります。

振動や強い衝撃を与えない

火災や感電の原因となります。

取り付けた状態での部品交換は行わない

部品の落下の危険性があり、事故の原因となります。

変形した取付金具・損傷した外郭部品を使って本機を設置しない

落下の危険性があり、事故の原因となります。

屋外や軒下に設置しない

取付部が劣化し、落下によるけがや事故の原因となります。

本体や取付金具に異常があったら放置しない

長期にわたって放置すると、各部の劣化が進み、落下によるけがや事故の原因となります。

- 取り外しは、販売店に依頼してください。



分解禁止

分解や改造をしない

感電や火災の原因、落下によるけがや事故の原因となります。

- 内部の点検や修理などは、お買い上げの販売店にご相談ください。



水ぬれ禁止

水をかけたり、ぬらしたりしない

火災や感電の原因となります。

- 直ちに電源を切り、販売店に連絡してください。



接触禁止

雷が鳴り出したら、本機や接続したケーブルに触れない（工事時を含む）

感電の原因となります。



水場で使用しない

火災や感電の原因となります。

⚠ 注意



人がぶつからない高さに取り付ける
けがの原因となります。

廃棄は専門業者に依頼する

燃やすと化学物質などで目を痛めたり、火災、やけどの原因となります。



無理な力を加えない

取付部が破損し、落下によるけがや事故の原因となります。

設置のしかた

設置上のお願い

- 工事は必ず販売店に依頼してください。
- 工事を行う前に、接続する機器の電源スイッチを「切」にしてください。
- 「安全上のご注意」をよく読んでその指示にしたがってください。接続する機器の取扱説明書も必ずお読みください。
- 安全のため充分な落下防止対策を施し、必ず定期的に保守点検を実施してください。
- 傷害防止のため、この機器は、取扱説明書にしたがって天井にしっかりと取り付ける必要があります。
- 本体の不良による落下事故以外の、取り付け方法の不備などによる落下事故に対する責任は一切弊社は負いかねますので、取り付け場所や取り付け方法の設計は十分な注意をお願いします。強度が不足の場合は、十分な補強をし、安全を確認して取り付けてください。



警告

設置工事は電気設備技術基準にしたがって実施してください。

本機は業務用機器です

本機は屋内専用です

- 屋外での使用はできません。
長時間直射日光のあたるところや、冷・暖房機の近くには設置しないでください。変形・変色または故障・誤動作の原因になります。また、水滴または水沫のかからない状態で使用してください。

工事は電源を入れないで行ってください

- 工事は、本機に電源が供給されていないことを確認して行ってください。また本システムに接続されているミキサーやアンプなどの電源も切ってから行ってください。接続時にスピーカーから大きなノイズが出て、機器の破損につながります。

設置場所について

- 本機の推奨設置高さは床面から2.5 m~3.7 mの範囲です。必ず水平になるように設置してください。

設置に必要な部材について

- 設置に必要なねじやそのほかの部材などの情報については本書の該当部分を参照してください。

以下の場所には設置しないでください

- 振動の多い場所や衝撃が加わる場所
- 湿気やほこり、振動の多い場所
- プールなど化学剤が使用されている場所
- ちゅう房など蒸気や油分の多い場所
- スピーカーやテレビ、磁石など、強い磁力を発生するものの近く
- 放射線やX線、および強力な電波や磁気の発生する場所
- テレビ・ラジオ・パソコンなどのOA機器の近く
- CSデジタル放送受信機（チューナー、チューナー内蔵のデジタルテレビ、レコーダーなど）の近く
- PHS・携帯電話基地局の近く
- 塩害や腐食性ガスが発生する場所
- 直射日光が当たる場所

電源について

- 本機には電源スイッチがありません。本機を電源から遮断するときはLANケーブルを抜いてください。設置条件により容易にLANケーブルを外せないときは、本機と接続するPoE給電L2スイッチの電源スイッチをOFFにするか電源コードを抜いてください。

静電気について

- 静電気による損傷を防止するために、設置工事の前に、アースの取れた金属製のものに触れて身体に帯電した静電気を放電してください。

本機の識別および定格表示について

- 本機の識別および電源、その他の表示は本機の上面銘板をお読みください。

ねじの締め付けについて

- ねじは指定のトルクにしたがい、まっすぐ締めてください。締めたあとは、目視にて、がたつきがなく、しっかりと締められていることを確認してください。
- インパクトドライバーや電動ドライバーは、クラッチ付のものであってもトルク管理が困難なため、使用すると取り付け部の破損の原因になりますので、使用しないでください。

強い衝撃を与えない

- 本機に強い衝撃を与えないでください。本機が破損するおそれがあります。

ネットワークへの接続について

- 外部施設からの屋外引き込みケーブルが直接接続されているネットワークに、本機を接続しないでください。

シーリングマイクの設置方法

天井取付、天井埋込、ワイヤー吊り下げ、VESAマウント金具取付の4種類の設置方法を説明します。本書では在来天井に取り付ける手順を説明しています。システム天井など天井パネルが外せる場合は、一旦天井パネルを外し、卓上で同様の穴開け等の作業をすると、施工が容易になります。作業後、外した天井パネルを再度天井に取り付けてください。


天井取付（天井パネル板厚は、10~25 mmまで取付可能です）

1 天井取付金具（付属品）にブリッジ金具（付属品）を仮固定する

天井取付用ねじ（短）（M4×8 mm：付属品）2本を使い、ブリッジ金具を天井取付金具（付属品）のいちばん高い位置（①）に仮固定します。同じ金具をもう1セット組み立てます。（合計2セット）




- 天井取付金具は工場出荷時の状態（ピッチ210 mm）で使用します。

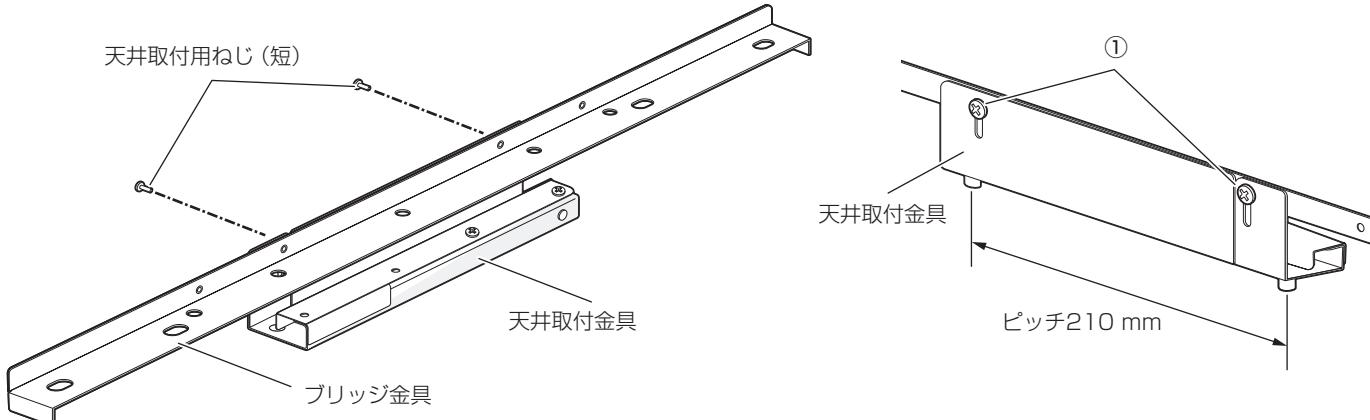

2 穴を開ける位置の天井裏を確認する

天井取付金具を設置したときに次の条件を満たすか、穴を開ける前に点検口などから天井裏を確認してください。

- 天井取付金具が天井構造フレームに重ならないこと（②）
- ブリッジ金具が天井構造フレームの上に乗ること

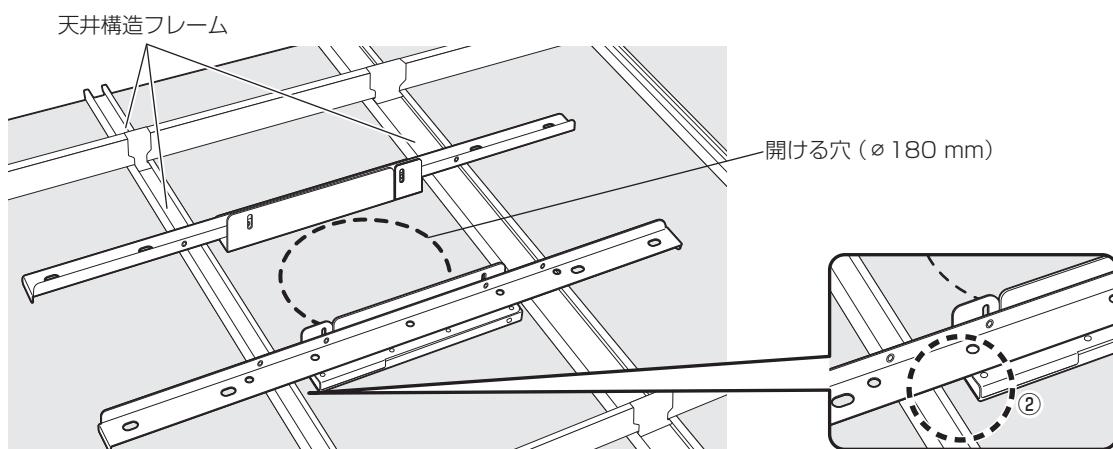


3 天井パネルに穴を開ける

天井パネルに穴を開けます。型紙（天井取付用）（付属品）を使うと位置決めがしやすくなります。



- 穴を開ける際は、目などに切粉が入らないように注意してください。
- 手順6で固定金具（付属品）を取り付ける際は、型紙の4つの辺（Ⓐ～Ⓓ）の任意の側を正面にして取り付けることができます。


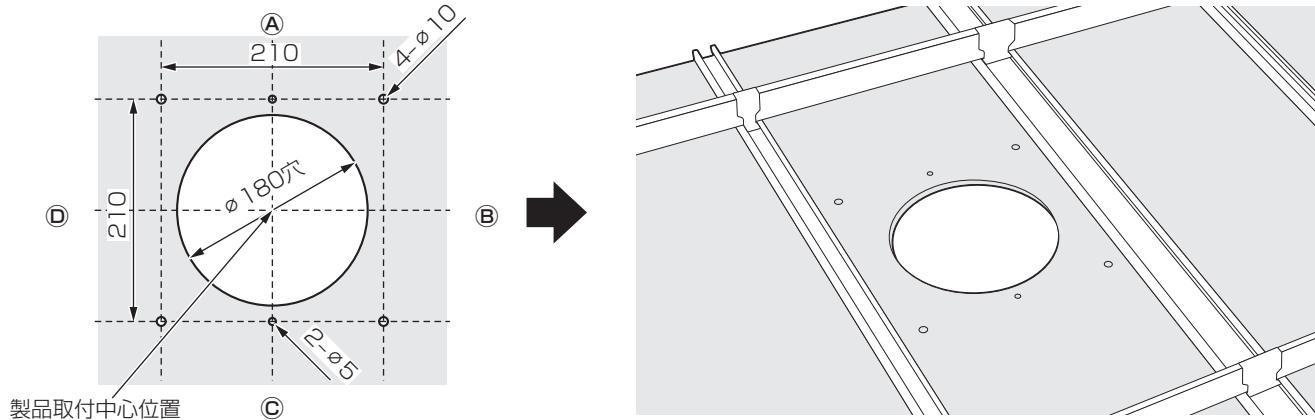


4 天井取付金具（付属品）を設置する

手順1で結合した金具2セットを穴から天井裏に入れます。金具1セットにつき天井取付用ねじ（長）（M4×35 mm : 付属品）1本を使用して、天井取付金具を天井パネルに固定します。もう一方の金具も同様に設置します。




- 天井パネルの種類によっては、強いトルクでねじ止めると天井パネルが割れるおそれがあります。ゆっくりと緩みのないように確実に固定してください。
- 天井パネルが柔らかく、ねじ頭が入り込んでしまう場合は市販のワッシャーを使用してねじ頭が入り込まないようにしてください。

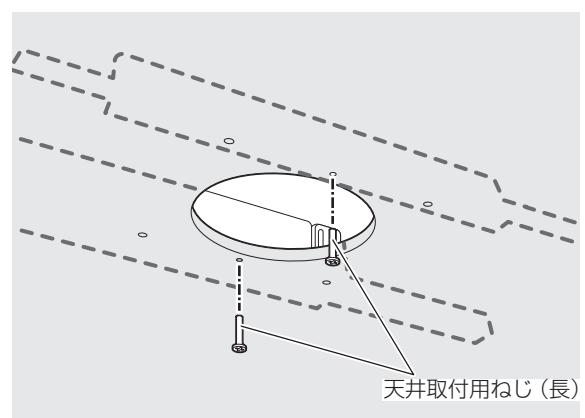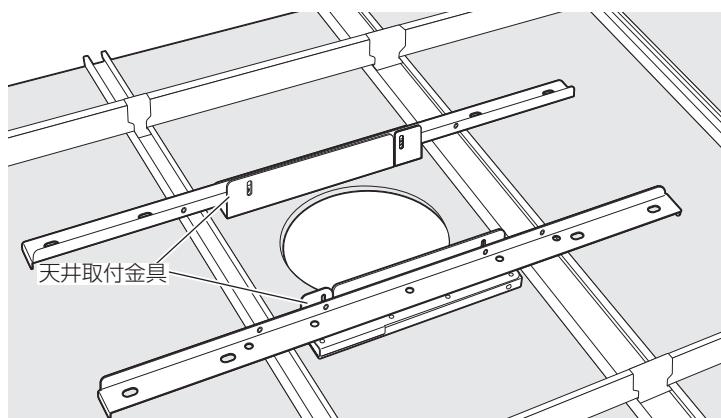

5 ブリッジ金具(付属品)の高さを調整する

手順1でブリッジ金具を仮止めしたねじ2本(③)を緩め、ブリッジ金具を天井構造フレームの上に乗るまで下げます。その状態でねじ2本を締め直します。もう一方の金具も同様に調整します。

- ねじ締め付けトルク: 0.8 N·m~1.0 N·m {8 kgf·cm~10 kgf·cm}

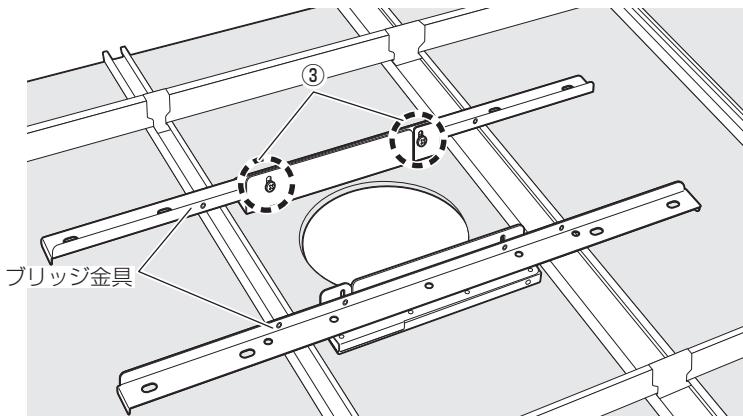


6 固定金具(付属品)を取り付ける

天井パネルの穴と固定金具の穴をあわせ、天井取付用ねじ(長)(M4×35 mm:付属品)4本で天井取付金具に固定します。

- ねじ締め付けトルク: 0.4 N·m~0.6 N·m {4 kgf·cm~6 kgf·cm}



- 天井パネルの種類によっては、強いトルクでねじ止めすると天井パネルが割れるおそれがあります。ゆっくりと緩みのないように確実に固定してください。
- フック(④)が本機正面の方向を向くように取り付けてください。

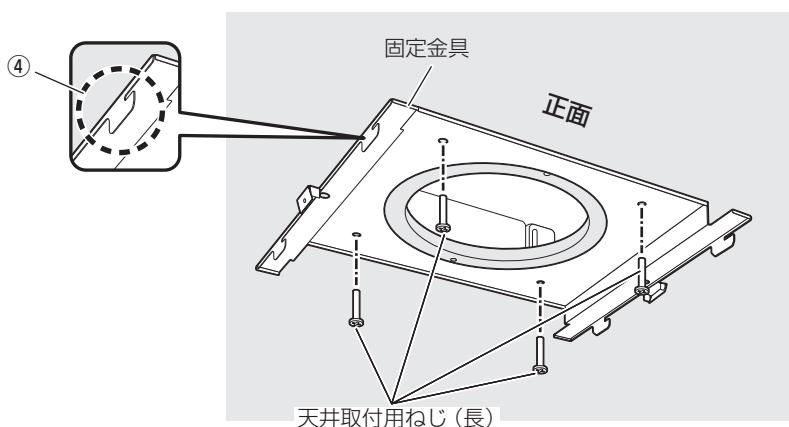


7 安全ワイヤー(付属品)を取り付ける

安全ワイヤーを頑丈な天井躯体(天井構造フレームやアンカーボルトなど)に掛けて、先端のフックを本機の安全ワイヤー取り付け部に取り付けます。



- 本機を安全ワイヤーで吊るしたときに人体に接触しない高さになるように、安全ワイヤーを掛ける位置を調整してください。

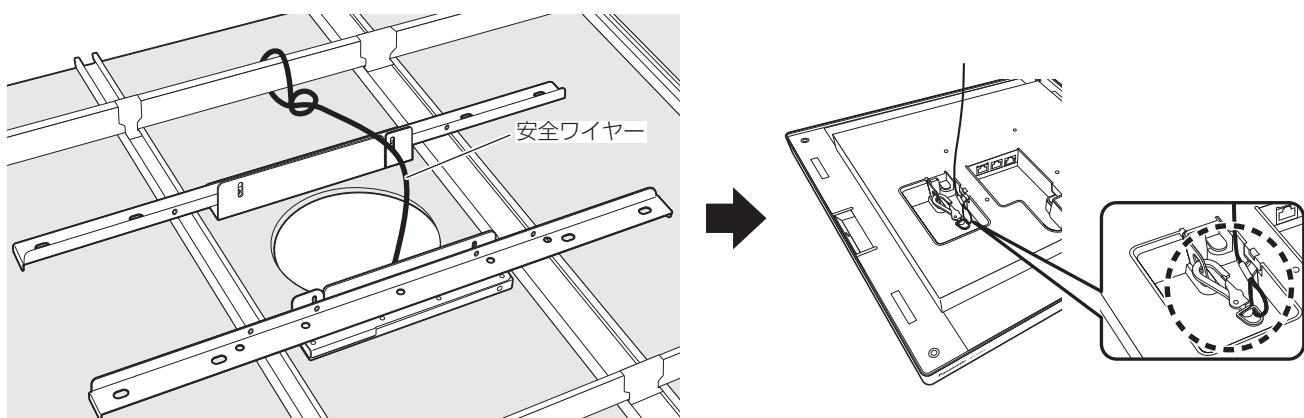


8 LANケーブルを接続する

周辺機器に接続するLANケーブル(⑤)を穴から取り出し、コネクターカバー(付属品)の穴に通して本機の接続端子に接続します。接続する端子の位置は周辺機器によって異なります。「接続のしかた」(26ページ)を参照して接続してください。

天井取付用ねじ(短)(M4×8 mm:付属品)2本で、コネクターカバーを本機に固定します。




- LANケーブルの接続部には、同じ種類の接続端子が3つ並んでいます。間違えないように接続してください。

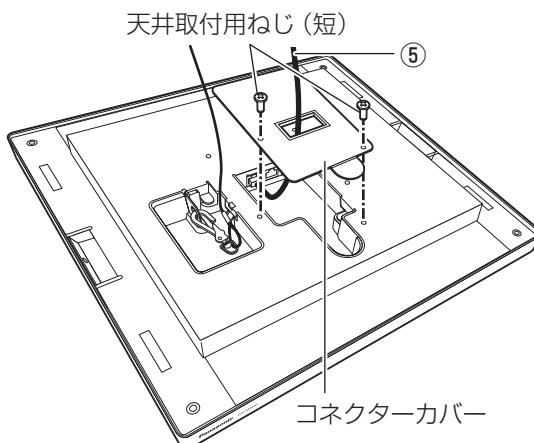


9 本機を固定金具（付属品）に仮固定する

本機の正面（Panasonicのロゴがある側）と固定金具の正面（フック）の向きを合わせて、本機のスリット（⑥）に固定金具のフック（⑦）を差し込み、後方（⑧）にスライドさせて仮固定します。

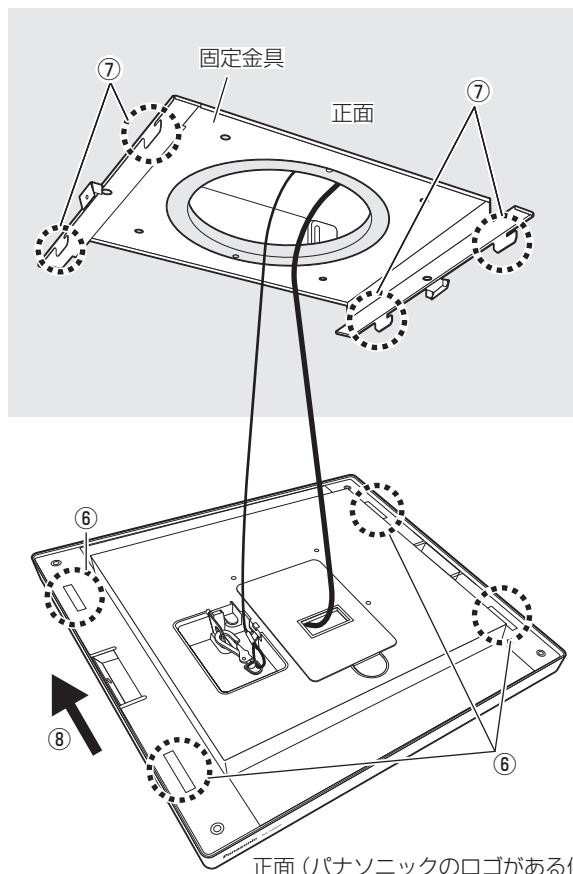


10 本機を固定金具（付属品）に固定する

左右の穴から天井取付用ねじ（短）（M4×8 mm：付属品）2本で固定します。
ねじ締め付けトルク：0.8 N·m～1.0 N·m {8 kgf·cm～10 kgf·cm}

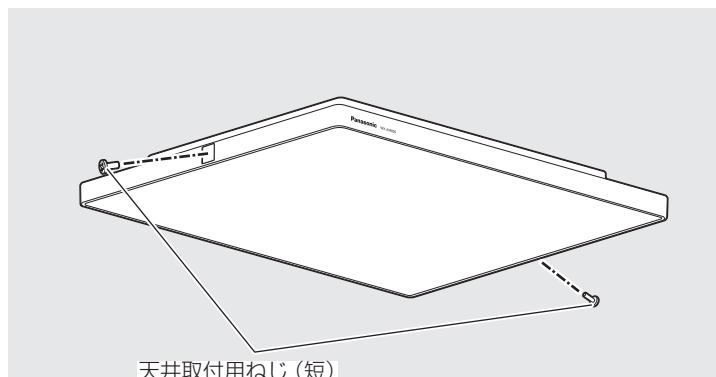

11 設置を確認する

設置完了後、緩みやガタツキがなく、しっかりと固定されているかを確認してください。
左右の穴にねじ隠しシート（付属品）2枚を貼り付けてください。

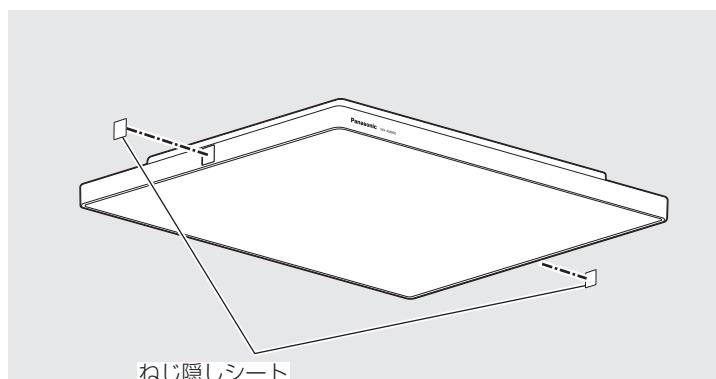


設置のしかた

天井埋込（天井パネル板厚は、10~25 mmまで取付可能です）

1 天井取付金具（付属品）を組み立てる


天井取付金具に取り付けられているねじを外し、ピッチが350 mmになるように金具を組み合わせ、外したねじ2本（M4×8 mm）で固定します。同じ金具をもう1セット組み立てます。（合計2セット）

- ねじ締め付けトルク：0.8 N·m～1.0 N·m {8 kgf·cm～10 kgf·cm}

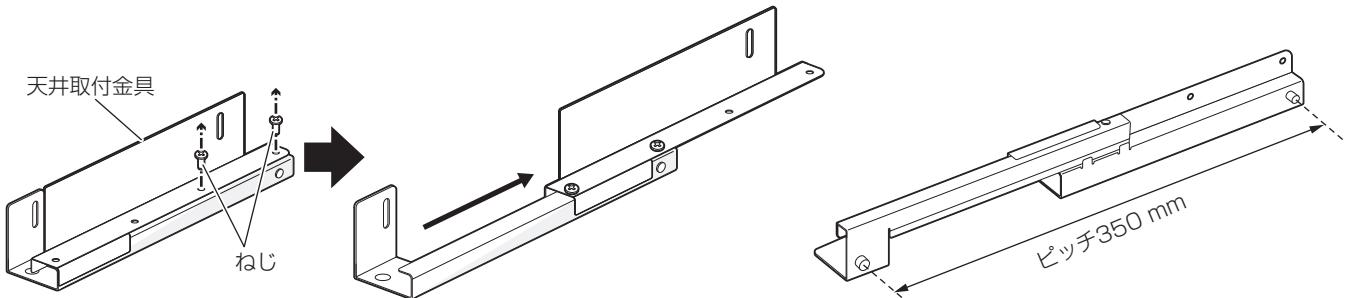

2 天井取付金具（付属品）にブリッジ金具（付属品）を仮固定する

天井取付用ねじ（短）（M4×8 mm：付属品）2本を使い、ブリッジ金具を天井取付金具のいちばん高い位置（①）に仮固定します。同じ金具をもう1セット組み立てます。

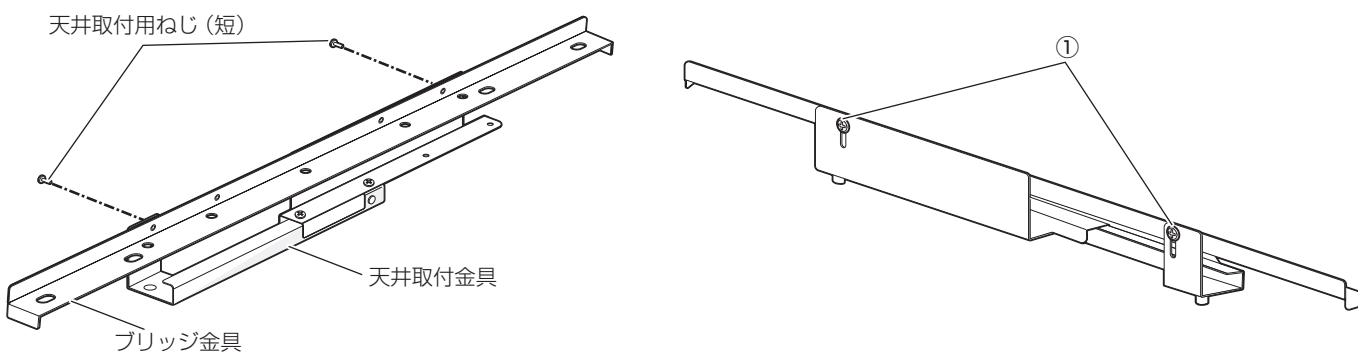


3 穴を開ける位置の天井裏を確認する

天井取付金具を設置したときに次の条件を満たすか、穴を開ける前に点検口などから天井裏を確認してください。

- 天井取付金具が天井構造フレームに重ならないこと（②）
- ブリッジ金具が天井構造フレームの上に乗ること



- 天井構造フレームを切断する場合は、必要に応じて補強をしてください。

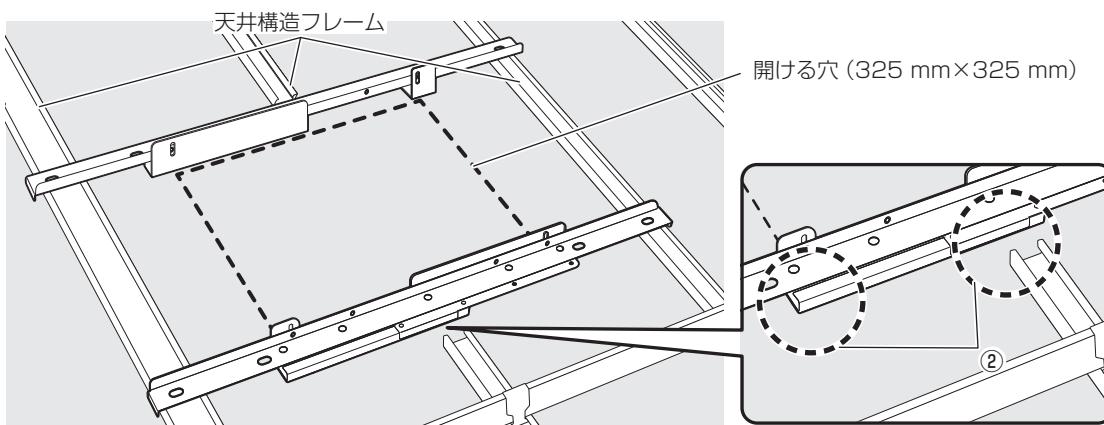


4 天井パネルに穴を開ける

天井パネルに穴を開けます。型紙（天井埋込用）（付属品）を使うと位置決めがしやすくなります。



- 穴を開ける際は、目などに切粉が入らないように注意してください。
- 手順7で固定金具を取り付ける際は、型紙の4つの辺（Ⓐ～Ⓓ）の任意の側を正面にして取り付けることができます。


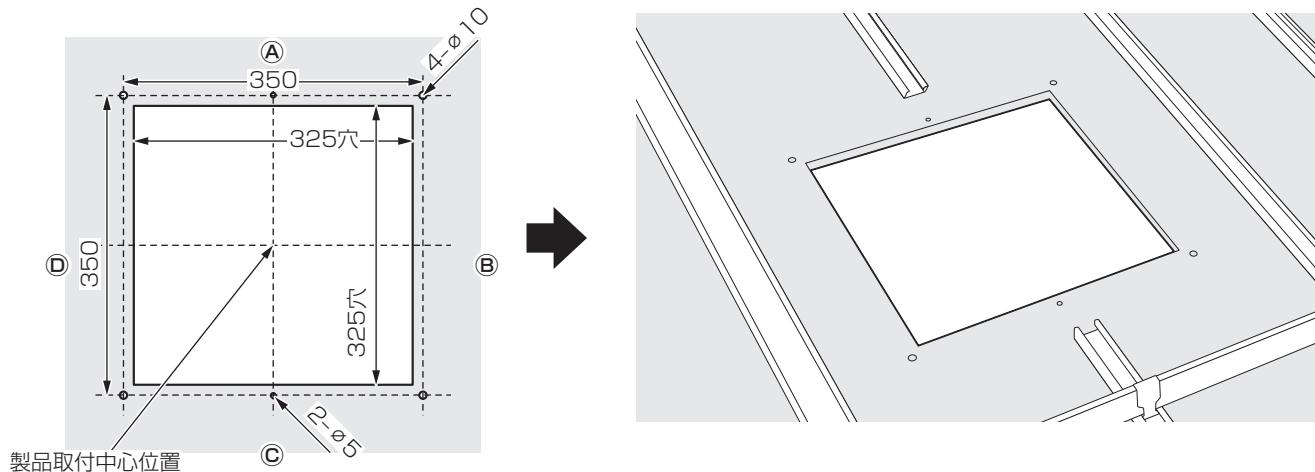


5 天井取付金具（付属品）を設置する

手順2で組み立てた金具2セットを穴から天井裏に入れます。金具1セットにつき天井取付用ねじ（長）（M4×35 mm：付属品）1本を使用して、天井取付金具を天井パネルに固定します。もう一方の金具も同様に設置します。




- 天井パネルの種類によっては、強いトルクでねじ止めすると天井パネルが割れるおそれがあります。ゆっくりと緩みのないように確実に固定してください。
- 天井パネルが柔らかく、ねじ頭が入り込んでしまう場合は市販のワッシャーを使用してねじ頭が入り込まないようにしてください。

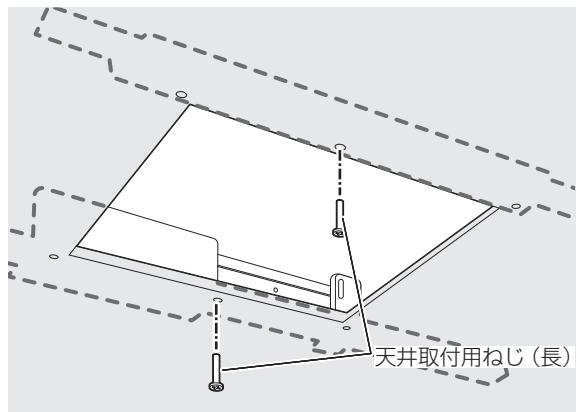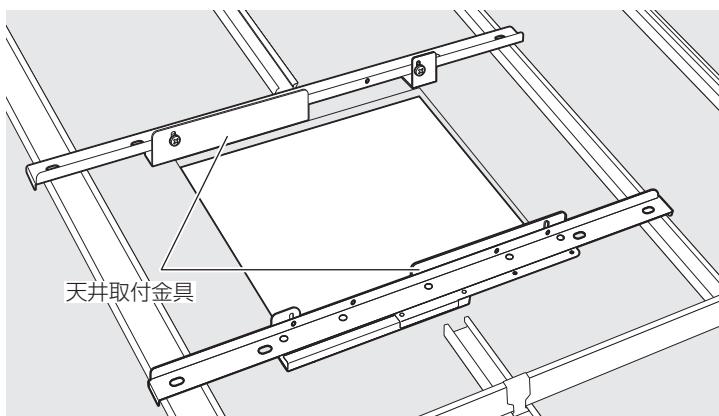

6 ブリッジ金具(付属品)の高さを調整する

手順2でブリッジ金具を仮止めしたねじ2本(③)を緩め、ブリッジ金具を天井構造フレームの上に乗るまで下げます。その状態でねじ2本を締め直します。もう一方の金具も同様に調整します。

- ねじ締め付けトルク: 0.8 N·m~1.0 N·m {8 kgf·cm~10 kgf·cm}

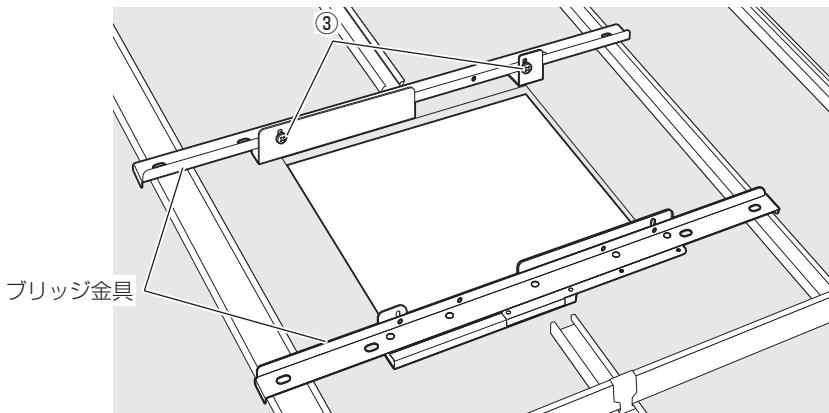


7 固定金具(付属品)を取り付ける

天井パネルの穴に固定金具をはめ込み、天井取付用ねじ(長)(M4×35 mm:付属品)4本で天井取付金具に固定します。

- ねじ締め付けトルク: 0.4 N·m~0.6 N·m {4 kgf·cm~6 kgf·cm}



- 天井パネルの種類によっては、強いトルクでねじ止めすると天井パネルが割れるおそれがあります。ゆっくりと緩みのないように確実に固定してください。
- フック(④)が本機正面の方向を向くように取り付けてください。

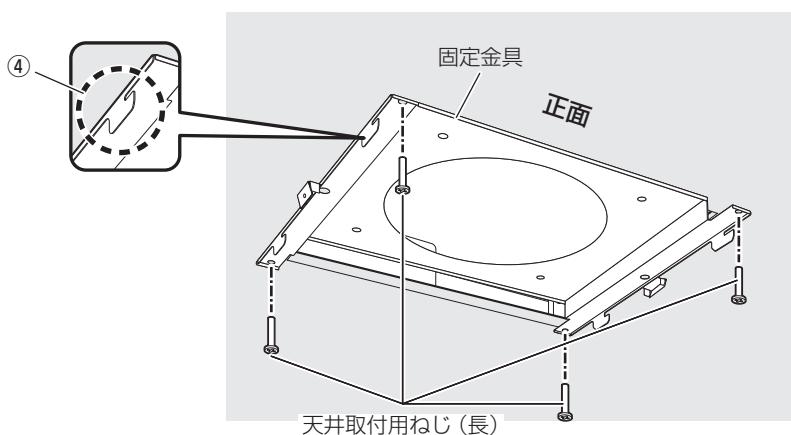


8 安全ワイヤー(付属品)を取り付ける

安全ワイヤーを頑丈な天井躯体(天井構造フレームやアンカーボルトなど)に掛けて、先端のフックを本機の安全ワイヤー取り付け部に取り付けます。



- 本機を安全ワイヤーで吊るしたときに人体に接触しない高さになるように、安全ワイヤーを掛け位置を調整してください。

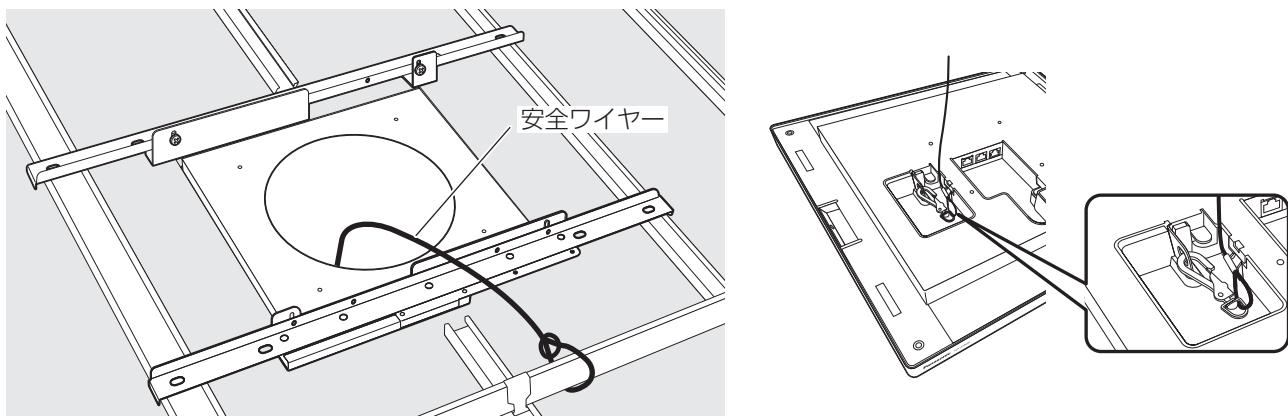


9 LANケーブルを接続する

周辺機器に接続するLANケーブル(⑤)を穴から取り出し、コネクターカバー(付属品)の穴に通して本機の接続端子に接続します。接続する端子の位置は周辺機器によって異なります。「接続のしかた」(26ページ)を参照して接続してください。

天井取付用ねじ(短)(M4×8 mm:付属品)2本で、コネクターカバーを本機に固定します。





- LANケーブルの接続部には、同じ種類の接続端子が3つ並んでいます。間違えないように接続してください。

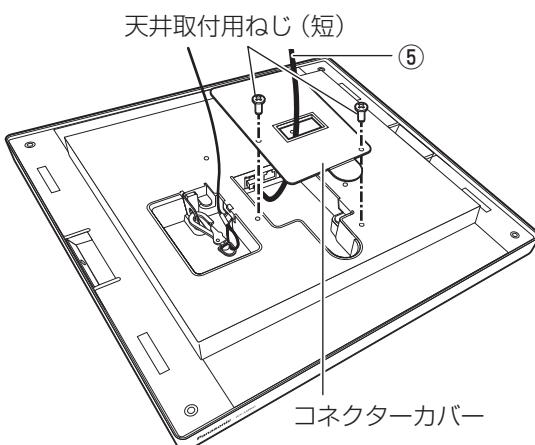

10 本機を固定金具（付属品）に仮固定する

本機の正面（Panasonicのロゴがある側）と固定金具の正面（フック）の向きを合わせて、本機のスリット（⑥）に固定金具のフック（⑦）を差し込み、後方（⑧）にスライドさせて仮固定します。

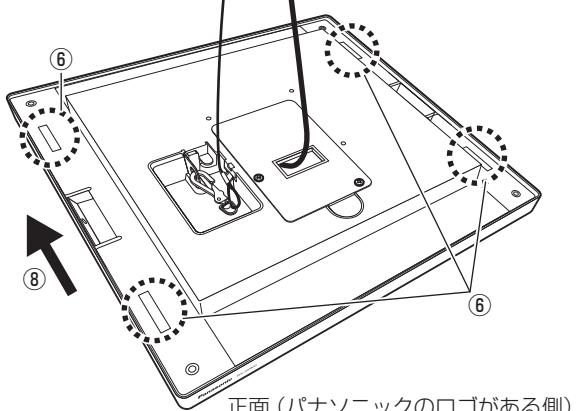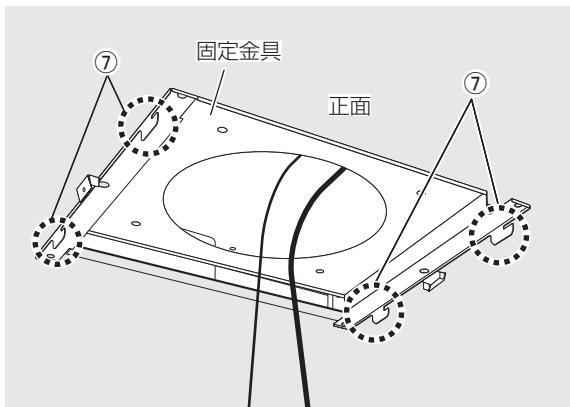


正面（パナソニックのロゴがある側）

11 本機を固定金具（付属品）に固定する


左右の穴から天井取付用ねじ（短）（M4×8 mm：付属品）2本で固定します。

- ねじ締め付けトルク：0.8 N·m～1.0 N·m {8 kgf·cm～10 kgf·cm}

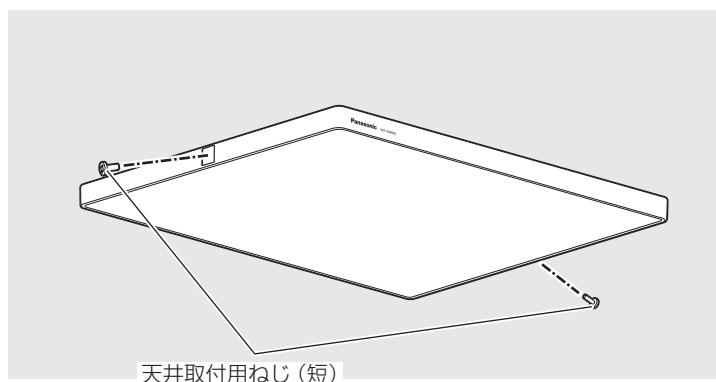

12 設置を確認する

設置完了後、緩みやガタツキがなく、しっかりと固定されているかを確認してください。
左右の穴にねじ隠しシート（付属品）2枚を貼り付けてください。

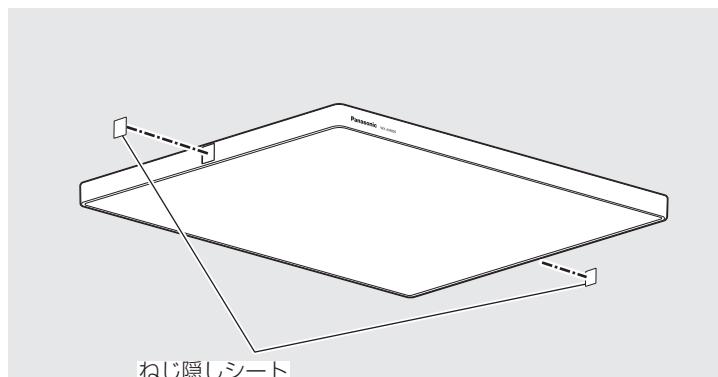

設置のしかた

ワイヤー吊り下げ

ワイヤーやフックは天井高さと本機設置高さを考慮して、適切な長さのものを選んでください。



- 落下防止のため、ワイヤーやフック1本でも総質量を保持できる耐荷重であることを確認してください。
- ワイヤー1本で吊るした状態でも本機が人体に接触しない高さになるように、設置高さを設定してください。


1 アイボルト(付属品)を取り付ける

本機にアイボルト4本を取り付けます。アイボルトのナット部を締め付けてください。

- ねじ締め付けトルク：1.0 N·m～1.5 N·m {10 kgf·cm～15 kgf·cm}




- アイボルトは規定の角度（0°～45°）の範囲でワイヤーを吊り下げてください。範囲外の角度では十分な強度を得られない場合があります。
- アイボルトを規定の角度の範囲外で使用すると、範囲外の角度では十分な強度を得られない場合があります。角度を付ける場合は外側に開く（本機よりも大きくなる）方向でワイヤー角度を調整してください。

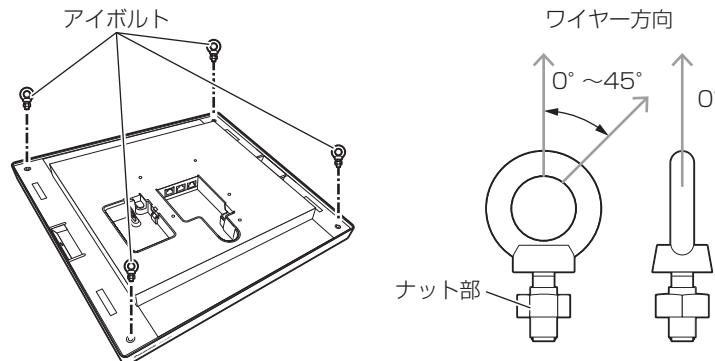

2 本機をワイヤー(市販品)のフック(市販品)に取り付ける

天井から吊るされたワイヤーのフックをアイボルトに取り付けてください。

ワイヤーは必ず4本取り付け、本機が水平になるよう同じ長さにしてください。

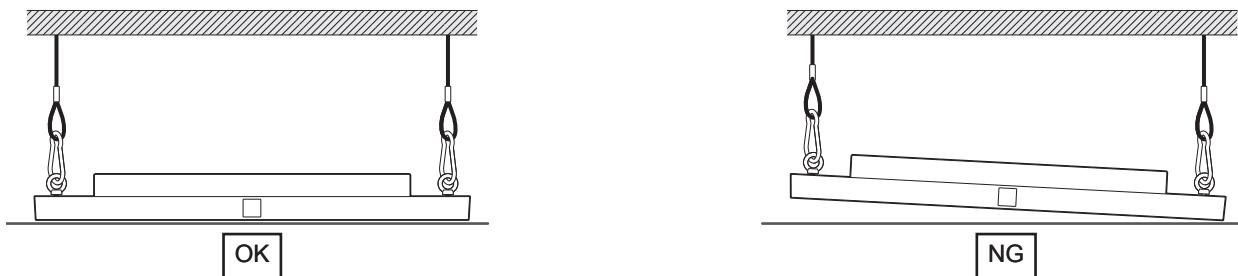


3 LANケーブルを接続する

周辺機器に接続するLANケーブルをコネクターカバー（付属品）の穴に通して、本機の接続端子に接続します。接続する端子の位置は周辺機器によって異なります。「接続のしかた」（26ページ）を参照して接続してください。天井取付用ねじ（短）（M4×8 mm：付属品）2本で、コネクターカバーを本機に固定します。




- LANケーブルの接続部には、同じ種類の接続端子が3つ並んでいます。間違えないように接続してください。

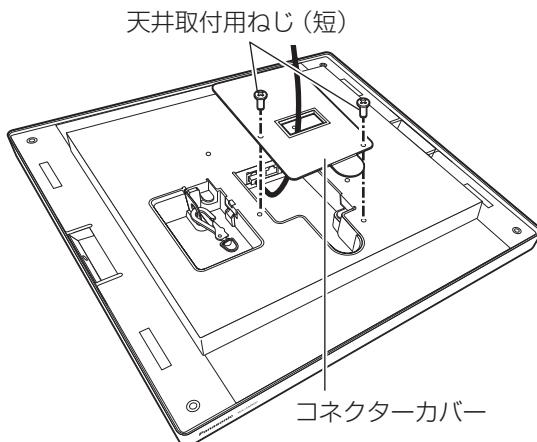

4 設置を確認する

設置完了後、緩みやガタツキがなく、しっかりと固定されているかを確認してください。
左右の穴にねじ隠しシート（付属品）2枚を貼り付けてください。

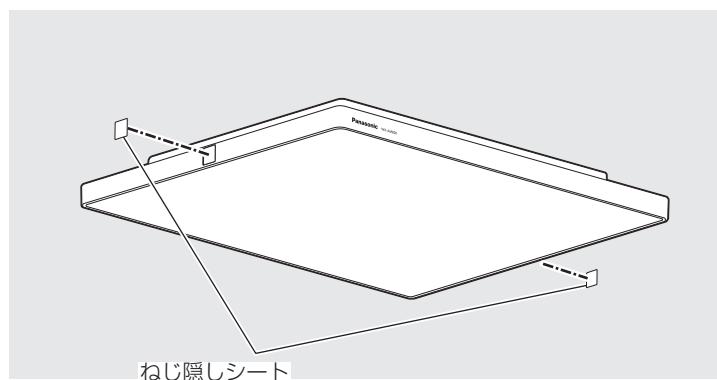

設置のしかた

VESAマウント金具取付

VESAマウント金具は天井高さと本機設置高さを考慮して、適切な長さのものを選んでください。



- 落下防止のため、VESAマウント金具が総質量を保持できる耐荷重であることを確認してください。

本機はVESA100（100 mm×100 mm M4ねじ 4本）マウントに対応しています。


取付はVESAマウント金具の取扱説明書にしたがって設置作業してください。以下は例として記載しています。

1 LANケーブルを接続する

周辺機器に接続するLANケーブルを本機の接続端子に接続します。接続する端子の位置は周辺機器によって異なります。「接続のしかた」(26ページ) を参照して接続してください。



- LANケーブルの接続部には、同じ種類の接続端子が3つ並んでいます。間違えないように接続してください。

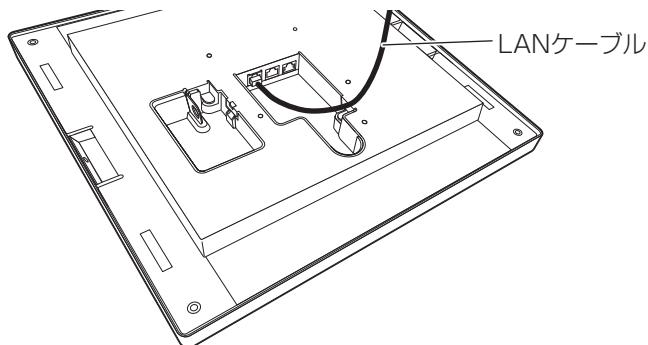


2 安全ワイヤー(付属品または市販品)を取り付ける

安全ワイヤーを頑丈な天井躯体(天井構造フレームやアンカーボルトなど)に掛けて、先端のフックを本機の安全ワイヤー取り付け部に取り付けます。




- 本機を安全ワイヤーで吊るしたときに人体に接触しない高さになるように、安全ワイヤーを掛ける位置を調整してください。
- 付属の安全ワイヤー(約75 cm)では長さが足りない場合は、総質量を保持できる耐荷重を備えた市販の安全ワイヤーを使用してください。

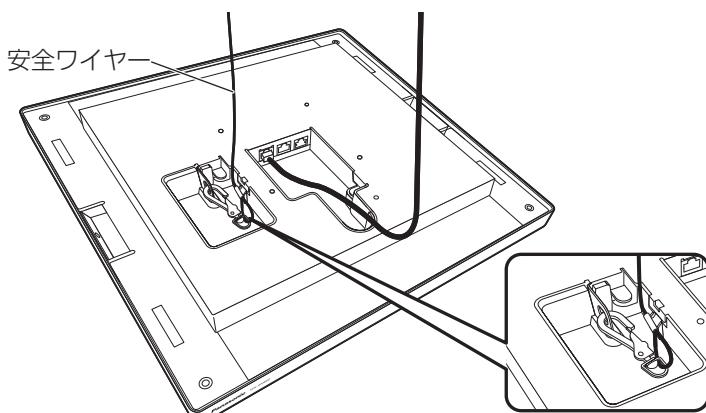

3 VESAマウント金具（市販品）に本機を取り付ける


天井に取り付けたVESAマウント金具に本機をVESA取付用ねじ（M4×10 mm：市販品）4本で取り付けてください。ねじ取付部3ヶ所にはラベルが貼り付けられています。ラベルを剥がしてからVESAマウント金具を取り付けてください。

- ねじ締め付けトルク：0.8 N·m～1.0 N·m {8 kgf·cm～10 kgf·cm}

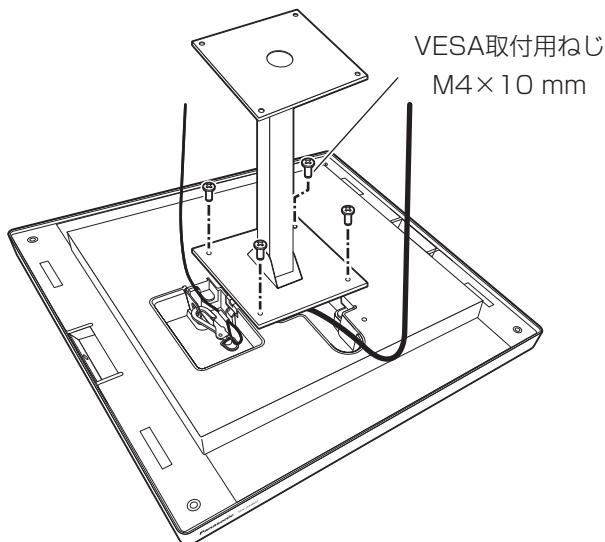


4 設置を確認する

設置完了後、緩みやガタツキがなく、しっかりと固定されているかを確認してください。
左右の穴にねじ隠しシート（付属品）2枚を貼り付けてください。

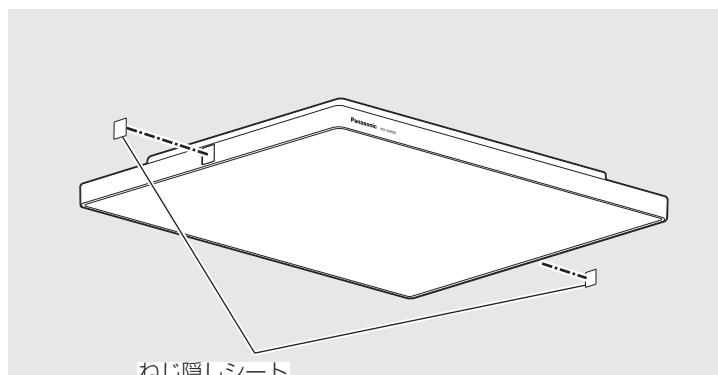

接続のしかた


本機に電源を供給し、ネットワークに接続するためのPoE給電L2スイッチ、L2スイッチに接続します。

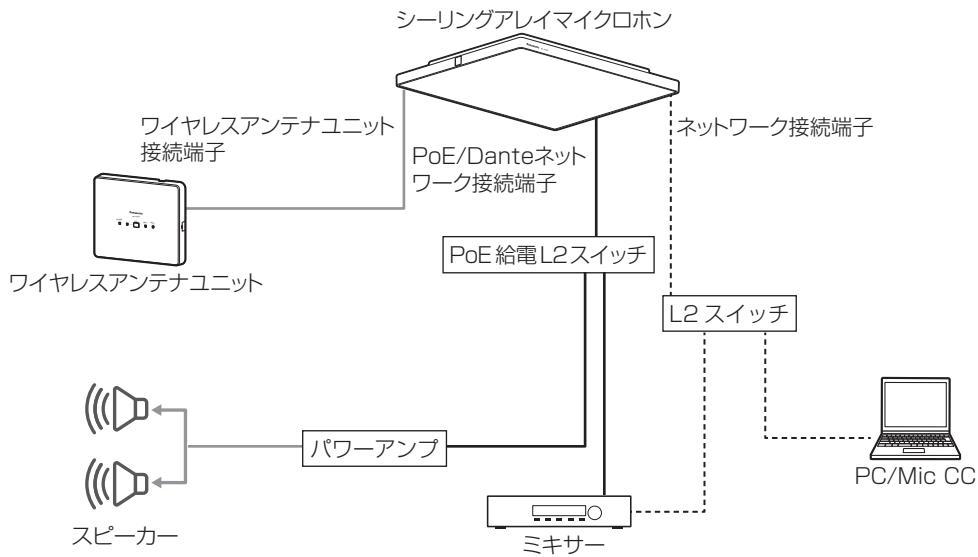

■ PoE給電L2スイッチとの接続、Danteネットワークとの接続

本機の電源はPoE給電L2スイッチから供給されます。PoE給電L2スイッチはDanteネットワークに収容してください。

- 1 PoE給電L2スイッチと接続するLANケーブル (CAT5e以上) を本機の「PoE/Danteネットワーク接続端子」に接続する

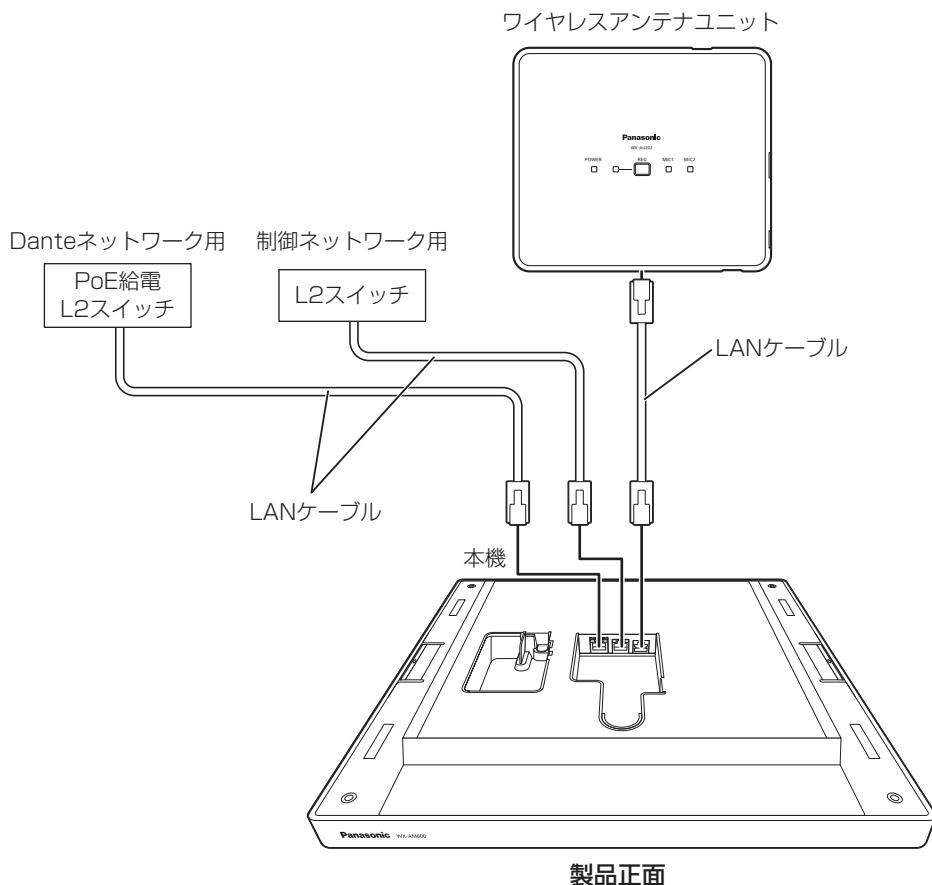

製品正面



- 本機に接続するPoE給電L2スイッチはPoE+(IEEE802.3at)に対応している必要があります。PoE(IEEE802.3af)のPoE給電ハブに接続した場合は本機は動作しません。
- セキュリティのため、Danteで使用するネットワークは、インターネットと接続していないローカルのネットワークを使用してください。



- Danteネットワーク接続を有効にするには、Dante Controllerを搭載しているPCが必要です。
- Danteネットワークの設定、オーディオのルーティングの設定と本機および増設受信機の設定変更は、Dante Controllerを使います。
Dante Controllerについては、Audinate Pty Ltdのウェブサイトをご参照ください。
<https://www.audinate.com/>
- Danteネットワークに使用するL2スイッチ（ネットワークスイッチ）は、以下の機能を持つL2スイッチを使用してください。
 - ① ギガビットパケット転送機能
 - ② 4つの絶対優先キューを持つDiffServ (DSCP) QoS機能
 - ③ スイッチの設定や状態をモニターできる管理機能
 - ④ EEE (Energy Efficient Ethernet) や省電力モードをOFFにできる機能
- L2スイッチの設定および操作方法については、L2スイッチの取扱説明書をお読みください。
- 音声の入出力はシステムのクロック状態が十分に安定してから行ってください。
- LANケーブル（市販品）は、CAT5e以上のストレートケーブルを使用してください。
- LANケーブル（市販品）の最大長は100 mです。

■ 制御ネットワークとの接続

Mic CCやリモートカメラが接続される制御ネットワークに接続します。

- 1 制御ネットワークのL2スイッチに接続されたLANケーブル（カテゴリー5e以上）を本機の「ネットワーク接続端子」に接続する



- LANケーブル（市販品）は、CAT5e以上のストレートケーブルを使用してください。
- LANケーブル（市販品）の最大長は100 mです。

■ ワイヤレスアンテナユニットとの接続

本機にワイヤレスアンテナユニットは1台接続できます。

同じルーム内に複数のシーリングマイクを設置する場合、最大2台のシーリングマイクにワイヤレスアンテナユニットを接続できます。（同じルーム内に設置できるワイヤレスアンテナユニットは最大2台となります。）

- 1 本機の「ワイヤレスアンテナユニット接続端子」とワイヤレスアンテナユニットの「シーリングアレイマイクロホン接続端子」をLANケーブル（カテゴリー5eまたはカテゴリー6ストレートケーブル）で接続する




- 本機のワイヤレスアンテナユニット接続端子の仕様は本機専用となっています。
PoE給電装置（給電機能付きハブもしくはルーター）には接続しないでください。故障の原因となります。
- 本機とワイヤレスアンテナユニットは必ずストレートケーブルで接続してください。クロスケーブルで接続すると故障の原因となります。
- 本機の電源が入った状態でワイヤレスアンテナユニットを本機に接続しないでください。また、本機との接続を外さないでください。故障の原因となります。



- LANケーブルはカテゴリー5e、またはカテゴリー6ストレートケーブルを使用してください。
- LANケーブルは60 m以内のものを使用してください。

外形寸法図

(単位 : mm)

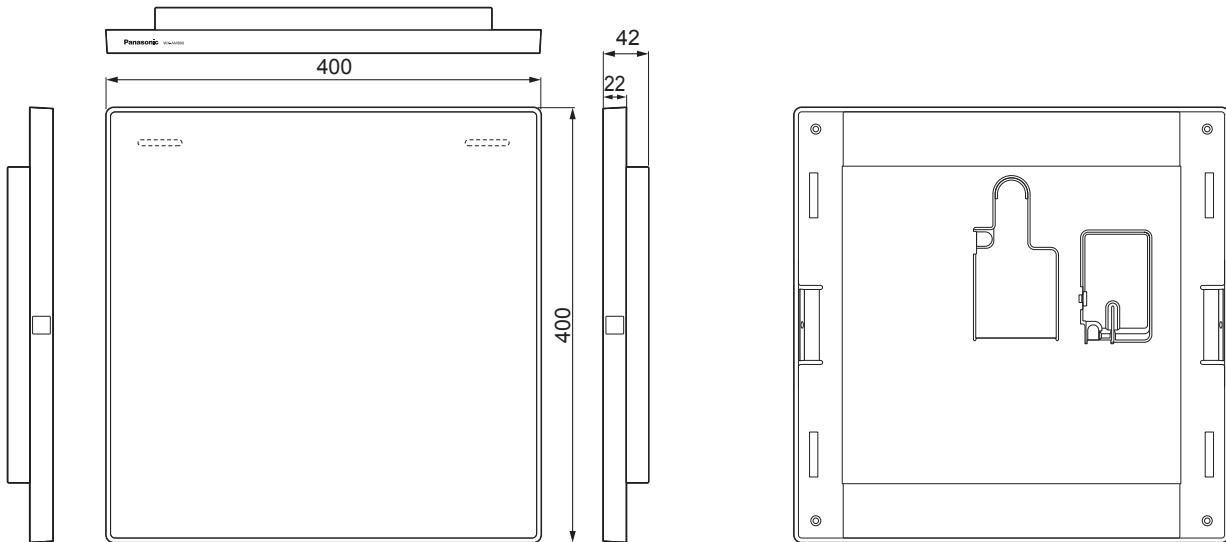

故障かな!?

修理を依頼される前に、この表で現象を確かめてください。

これらの対策をしても直らないときや、この表以外の現象のときは、お買い上げの販売店にご相談ください。

現象	原因・対策	参照ページ
電源が入らない	<ul style="list-style-type: none">● 本機に接続しているPoE給電L2スイッチの電源が「入」になっていませんか? → PoE給電L2スイッチの電源が「入」になっているか、確認ください。	—
	<ul style="list-style-type: none">● 本機とPoE給電L2スイッチを接続するLANケーブルが外れていませんか? → PoE/Dante接続端子にLANケーブルが接続されているか、確認ください。	26
	<ul style="list-style-type: none">● 本機と接続するPoE給電L2スイッチの接続端子はPoE給電ポートになっていますか? → PoE給電対応のポートにLANケーブルを接続してください。	—
メンテナンス表示灯が遅い赤色点滅している	<ul style="list-style-type: none">● 本機に接続しているPoE給電L2スイッチのPoEタイプはPoE+になっていますか? → PoE+に対応したPoE給電L2スイッチに変更してください。	26
収音できない（場所がある）	<ul style="list-style-type: none">● 収音したい場所は収音エリアに設定されていますか? → ダイナミック収音エリアまたはスタティック収音エリアに設定してください。	Mic CC取扱説明書 (シーリングアレイマイクロホン編)
メンテナンス表示灯が橙色点滅して、ワイヤレスアンテナユニットが起動しない	<ul style="list-style-type: none">● ワイヤレスアンテナユニット接続有の設定になっていますか? → Mic CCでワイヤレスアンテナユニット接続有の設定にしてください。	Mic CC取扱説明書 (シーリングアレイマイクロホン編)
マイクが登録できない	<ul style="list-style-type: none">● ワイヤレスアンテナユニット接続端子のLANケーブルが外れていますか? → ワイヤレスアンテナユニット接続端子にケーブルを挿入してください。	27
	<ul style="list-style-type: none">● マイクの電池の残量がなくなっていますか? → 新しい電池に交換または充電池の場合は充電し、登録を行ってください。	ワイヤレスマイク 取扱説明書

仕様

一般仕様

電源	PoE+ (IEEE802.3at)	
消費電力	最大	18 W
使用温度範囲	0 ℃～+40 ℃	
動作湿度範囲	10 %～90 %	
ワイヤレスアンテナユニット接続端子	接続数	1
	コネクター	RJ-45
	使用ケーブル	CAT5e/CAT6 ストレートケーブル
ネットワーク接続端子	コネクター	RJ-45
	通信方式	100BASE-TX
	表示灯	LINK/ACT (ステータス)、100M (速度)
PoE/Dante接続端子	コネクター	RJ-45
	接続ネットワーク	Danteネットワーク
	出力チャンネル数	8チャンネル
	入力チャンネル数	8チャンネル
	表示灯	LINK/ACT (ステータス)、1G (速度)
寸法	約400 mm (幅) × 400 mm (奥行き) × 42 mm (高さ)	
質量	約2.4 kg (取付金具含まず)	
仕上げ	セイルホワイト (マンセルN9.3近似色)	

オーディオ仕様

周波数特性	100 Hz～16 kHz
サンプリングレート	48 kHz
ビット数	24
感度	-18 dBFS / 0.1 Pa
最大入力音圧レベル	105 dB SPL
SNR (Ref.74 dB SPL at 1 kHz)	60 dBA
ダイナミックレンジ	93 dB
指向性	ビームパターン

保証とアフターサービス

よくお読みください

使いかた・お手入れ・修理などは

■まず、お買い求め先へ ご相談ください

▼お買い上げの際に記入されると便利です

販売店名

電 話 () -

お買い上げ日 年 月 日

修理を依頼されるときは

「故障かな!?」(29ページ)でご確認のあと、直らないときは、PoE給電L2スイッチと接続しているLANケーブルを抜き、お買い上げ日と右の内容をご連絡ください。

●製品名 シーリングアレイマイクロホン

●品 番 WX-AM800

●故障の状況 できるだけ具体的に

●保証期間中は、保証書の規定に従って出張修理いたします。

保証期間：お買い上げ日から本体1年間

●保証期間終了後は、診断をして修理できる場合はご要望により修理させていただきます。

※修理料金は次の内容で構成されています。

技術料	診断・修理・調整・点検などの費用
部品代	部品および補助材料代
出張料	技術者を派遣する費用

※補修用性能部品の保有期間 **7年**

当社は、本製品の補修用性能部品（製品の機能を維持するための部品）を、製造打ち切り後7年保有しています。

アフターサービスについて、おわかりにならないとき

お買い上げの販売店または保証書表面に記載されています連絡先へお問い合わせください。

その他

保証とアフターサービス

高所設置製品に関するお願い

安全にお使いいただくために、1年に1回をめやすに、販売店または施工業者による点検をおすすめします。

本機を高所に設置してお使いの場合、落下によるけがや事故を未然に防止するため、下記のような状態ではないか、日常的に確認してください。

特に10年を超えてお使いの場合は、定期的な点検回数を増やすとともに買い換えの検討をお願いします。

詳しくは、販売店または施工業者に相談してください。

このような状態ではありませんか？

- 本機を使用せずに放置している。
- 取付ねじがゆるんだり、抜けたりしている。
- 取付部がぐらぐらしたり、傾いたりしている。
- 本機および取付部に破損や著しいさびがある。

直ちに使用を中止してください

事故防止のため、必ず販売店または施工業者に撤去を依頼してください。

事故防止のため、必ず販売店または施工業者に点検を依頼してください。

長期間使用に関するお願い

安全にお使いいただくために、販売店または施工業者による定期的な点検をお願いします。

本機を長年お使いの場合、外観上は異常がなくても、使用環境によっては部品が劣化している可能性があり、故障したり、事故につながることもあります。

下記のような状態ではないか、日常的に確認してください。

特に10年を超えてお使いの場合は、定期的な点検回数を増やすとともに買い替えの検討をお願いします。

詳しくは、販売店または施工業者に相談してください。

このような状態ではありませんか？

- 煙が出たり、こげくさいにおいや異常な音がする。
- 製品に触るとビリビリと電気を感じる。
- 電源を入れても、音が出てこない。
- その他の異常・故障がある。

直ちに使用を中止してください

故障や事故防止のため、電源を切り、必ず販売店または施工業者に点検や撤去を依頼してください。

付録・ライセンス文について

u-boot

```
/* Copyright (c) 2015 Wojciech Owczarek.  
 * Copyright (c) 2014 Perseus Telecom.  
 * Copyright (c) 2013-2014 Harlan Stenn,  
 * George N. Neville-Neil,  
 * Wojciech Owczarek,  
 * Jan Breuer.  
 * Copyright (c) 2011-2012 George V. Neville-Neil,  
 * Steven Kreuzer,  
 * Martin Burnicki,  
 * Jan Breuer,  
 * Wojciech Owczarek,  
 * Gael Mace,  
 * Alexandre Van Kempen,  
 * Inaki Delgado,  
 * Rick Ratzel,  
 * National Instruments.  
 * Copyright (c) 2009-2010 George V. Neville-Neil,  
 * Steven Kreuzer,  
 * Martin Burnicki,  
 * Jan Breuer,  
 * Gael Mace,  
 * Alexandre Van Kempen.  
 *  
 * Copyright (c) 2005-2008 Kendall Correll, Aidan Williams  
 *  
 * All Rights Reserved  
 *  
 * Redistribution and use in source and binary forms, with or without  
 * modification, are permitted provided that the following conditions are  
 * met:  
 * 1. Redistributions of source code must retain the above copyright notice,  
 * this list of conditions and the following disclaimer.  
 * 2. Redistributions in binary form must reproduce the above copyright  
 * notice, this list of conditions and the following disclaimer in the  
 * documentation and/or other materials provided with the distribution.  
 *  
 * THIS SOFTWARE IS PROVIDED BY THE AUTHORS "AS IS" AND ANY EXPRESS OR  
 * IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED  
 * WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE  
 * ARE  
 * DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE  
 * FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR  
 * CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT  
 * OF  
 * SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR  
 * BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,  
 * WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE  
 * OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN  
 * IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.  
 */
```

libsodium

<https://raw.githubusercontent.com/jedisct1/libsodium/master/LICENSE>

```
/*  
 * ISC License  
 *  
 * Copyright (c) 2013-2020 Frank Denis  
 *  
 * Permission to use, copy, modify, and/or distribute this software for any  
 * purpose with or without fee is hereby granted, provided that the above  
 * copyright notice and this permission notice appear in all copies.  
 *  
 * THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL  
 * WARRANTIES
```

```
* WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF  
* MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR  
* ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES  
* WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN  
* ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF  
* OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.  
*/
```

zlib

<https://raw.githubusercontent.com/madler/zlib/master/zlib.h>

```
/* zlib.h -- interface of the 'zlib' general purpose compression library version 1.2.11, January  
15th, 2017
```

Copyright (C) 1995-2017 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented

as being the original software.

3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly Mark Adler
jloup@gzip.org madler@alumni.caltech.edu

The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files <http://tools.ietf.org/html/rfc1950> (zlib format), rfc1951 (deflate format) and rfc1952 (gzip format).

mDNSResponder

<https://raw.githubusercontent.com/krestenkrab/mdns-responder/master/LICENSE>

The majority of the source code in the mDNSResponder project is licensed under the terms of the Apache License, Version 2.0, available from:

To accommodate license compatibility with the widest possible range of client code licenses, the shared library code, which is linked at runtime into the same address space as the client using it, is licensed under the terms of the "Three-Clause BSD License".

The Linux Name Service Switch code, contributed by National ICT Australia Ltd (NICTA) is licensed under the terms of the NICTA Public Software Licence (which is substantially similar to the "Three-Clause BSD License", with some additional language pertaining to Australian law).

glibc

<https://raw.githubusercontent.com/lettera/glibc/master/LICENSES>

This file contains the copying permission notices for various files in the GNU C Library distribution that have copyright owners other than the Free Software Foundation. These notices all require that a copy of the notice be included in the accompanying documentation and be distributed with binary distributions of the code, so be sure to include this file along with any binary distributions derived from the GNU C Library.

All code incorporated from 4.4 BSD is distributed under the following license:

Copyright (C) 1991 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. [This condition was removed.]
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The DNS resolver code, taken from BIND 4.9.5, is copyrighted by UC Berkeley, by Digital Equipment Corporation and by Internet Software Consortium. The DEC portions are under the following license:

Portions Copyright (C) 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED "AS IS" AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The ISC portions are under the following license:

Portions Copyright (c) 1996-1999 by Internet Software Consortium.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND INTERNET SOFTWARE CONSORTIUM DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL INTERNET SOFTWARE CONSORTIUM BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

付録・ライセンス文について

The Sun RPC support (from rpcsrc-4.0) is covered by the following license:
Copyright (c) 2010, Oracle America, Inc.
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
* Neither the name of the "Oracle America, Inc." nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The following CMU license covers some of the support code for Mach, derived from Mach 3.0: Mach Operating System
Copyright (C) 1991, 1990, 1989 Carnegie Mellon University
All Rights Reserved.
Permission to use, copy, modify and distribute this software and its documentation is hereby granted, provided that both the copyright notice and this permission notice appear in all copies of the software, derivative works or modified versions, and any portions thereof, and that both notices appear in supporting documentation.
CARNEGIE MELLON ALLOWS FREE USE OF THIS SOFTWARE IN ITS "AS IS" CONDITION. CARNEGIE MELLON DISCLAIMS ANY LIABILITY OF ANY KIND FOR ANY DAMAGES WHATSOEVER RESULTING FROM THE USE OF THIS SOFTWARE.
Carnegie Mellon requests users of this software to return to
Software Distribution Coordinator
School of Computer Science
Carnegie Mellon University
Pittsburgh PA 15213-3890
or Software.Distribution@CS.CMU.EDU any improvements or extensions that they make and grant Carnegie Mellon the rights to redistribute these changes.

The file if_ppp.h is under the following CMU license:
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
THIS SOFTWARE IS PROVIDED BY CARNEGIE MELLON UNIVERSITY AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE UNIVERSITY OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The following license covers the files from Intel's "Highly Optimized Mathematical Functions for Itanium" collection:
Intel License Agreement
Copyright (c) 2000, Intel Corporation
All rights reserved.
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
* The name of Intel Corporation may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL INTEL OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS

SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The files inet/getnameinfo.c and sysdeps/posix/getaddrinfo.c are copyright (C) by Craig Metz and are distributed under the following license:

/* The Inner Net License, Version 2.00
The author(s) grant permission for redistribution and use in source and binary forms, with or without modification, of the software and documentation provided that the following conditions are met:

0. If you receive a version of the software that is specifically labelled as not being for redistribution (check the version message and/or README), you are not permitted to redistribute that version of the software in any way or form.
1. All terms of the all other applicable copyrights and licenses must be followed.
2. Redistributions of source code must retain the authors' copyright notice(s), this list of conditions, and the following disclaimer.
3. Redistributions in binary form must reproduce the authors' copyright notice(s), this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution.
4. [The copyright holder has authorized the removal of this clause.]
5. Neither the name(s) of the author(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY ITS AUTHORS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

If these license terms cause you a real problem, contact the author. */

The file sunrpc/des_impl.c is copyright Eric Young:

Copyright (C) 1992 Eric Young
Collected from libdes and modified for SECURE RPC by Martin Kuck 1994
This file is distributed under the terms of the GNU Lesser General Public License, version 2.1 or later - see the file COPYING.LIB for details.
If you did not receive a copy of the license with this program, please see <<http://www.gnu.org/licenses/>> to obtain a copy.

The file inet/rcmd.c is under a UCB copyright and the following:
Copyright (C) 1998 WIDE Project.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 3. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The file posix/runtests.c is copyright Tom Lord:

Copyright 1995 by Tom Lord
All Rights Reserved
Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of the copyright holder not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.
Tom Lord DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL TOM LORD BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The posix/rxspencer tests are copyright Henry Spencer:

Copyright 1992, 1993, 1994, 1997 Henry Spencer. All rights reserved.
This software is not subject to any license of the American Telephone and Telegraph Company or of the Regents of the University of California.
Permission is granted to anyone to use this software for any purpose on any computer system, and to alter it and redistribute it, subject to the following restrictions:
1. The author is not responsible for the consequences of use of this software, no matter how awful, even if they arise from flaws in it.

2. The origin of this software must not be misrepresented, either by explicit claim or by omission. Since few users ever read sources, credits must appear in the documentation.
 3. Altered versions must be plainly marked as such, and must not be misrepresented as being the original software. Since few users ever read sources, credits must appear in the documentation.
 4. This notice may not be removed or altered.

The file posix/PCRE.tests is copyright University of Cambridge:

Copyright (c) 1997-2003 University of Cambridge

Permission is granted to anyone to use this software for any purpose on any computer system, and to redistribute it freely, subject to the following restrictions:

1. This software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.
2. The origin of this software must not be misrepresented, either by explicit claim or by omission. In practice, this means that if you use PCRE in software that you distribute to others, commercially or otherwise, you must put a sentence like this Regular expression support is provided by the PCRE library package, which is open source software, written by Philip Hazel, and copyright by the University of Cambridge, England. somewhere reasonably visible in your documentation and in any relevant files or online help data or similar. A reference to the ftp site for the source, that is, to, <ftp://ftp.csx.cam.ac.uk/pub/software/programming/pcre/> should also be given in the documentation. However, this condition is not intended to apply to whole chains of software. If package A includes PCRE, it must acknowledge it, but if package B is software that includes package A, the condition is not imposed on package B (unless it uses PCRE independently).
3. Altered versions must be plainly marked as such, and must not be misrepresented as being the original software.
4. If PCRE is embedded in any software that is released under the GNU General Purpose Licence (GPL), or Lesser General Purpose Licence (LGPL), then the terms of that licence shall supersede any condition above with which it is incompatible.

Files from Sun fdlibm are copyright Sun Microsystems, Inc.:

Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

Developed at SunPro, a Sun Microsystems, Inc. business.

Permission to use, copy, modify, and distribute this software is freely granted, provided that this notice is preserved.

Various long double libm functions are copyright Stephen L. Moshier:

Copyright 2001 by Stephen L. Moshier <moshier@na-net.ornl.gov>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, see

<<http://www.gnu.org/licenses/>>. */

Precision Time Protocol daemon

<https://raw.githubusercontent.com/ptpd/ptpd/master/COPYRIGHT>

/*~

* Copyright (c) 2015 Wojciech Owczarek.
 * Copyright (c) 2014 Perseus Telecom.
 * Copyright (c) 2013-2014 Harlan Stenn,
 * George N. Neville-Neil,
 * Wojciech Owczarek,
 * Jan Breuer.
 * Copyright (c) 2011-2012 George V. Neville-Neil,
 * Steven Kreuzer,
 * Martin Burnicki,
 * Jan Breuer,
 * Wojciech Owczarek,
 * Gael Mace,
 * Alexandre Van Kempen,
 * Inaqui Delgado,
 * Rick Ratzel,
 * National Instruments.
 * Copyright (c) 2009-2010 George V. Neville-Neil,
 * Steven Kreuzer,
 * Martin Burnicki,
 * Jan Breuer,
 * Gael Mace,
 * Alexandre Van Kempen.
 *
 * Copyright (c) 2005-2008 Kendall Correll, Aidan Williams
 *
 * All Rights Reserved
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions are
 * met:
 * 1. Redistributions of source code must retain the above copyright notice,
 * this list of conditions and the following disclaimer.
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in the
 * documentation and/or other materials provided with the distribution.
 *
 * THIS SOFTWARE IS PROVIDED BY THE AUTHORS "AS IS" AND ANY EXPRESS OR
 * IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED

* WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE
 * DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE
 * FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR
 * CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF
 * SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR
 * BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
 * WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
 * OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN
 * IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
 */

取扱説明書に記載されていない方法や、指定の部品を使用しない方法で施工されたことおよび現地調達の部品など本機以外の要因により事故や損害が生じたときには、当社では責任を負えません。また、その施工が原因で故障が生じた場合は、製品保証の対象外となります。

■使いかた・お手入れ・修理などは、まず、お買い求め先へご相談ください。

■その他ご不明な点は下記へご相談ください。

システムお客様ご相談センター

電話 フリー ダイヤル  0120-878-410 受付：9時～17時30分（土・日・祝日は受付のみ）
※携帯電話からもご利用になります。

ホームページからのお問い合わせは https://connect.panasonic.com/jp-ja/support_cs-contact

ご使用の回線（IP電話やひかり電話など）によっては、回線の混雑時に数分で切れる場合があります。

本書の「保証とアフターサービス」もご覧ください。

【ご相談窓口におけるお客様の個人情報のお取り扱いについて】

パナソニック コネクト株式会社およびグループ関係会社は、お客様の個人情報をご相談対応や修理対応などに利用させていただき、ご相談内容は録音させていただきます。また、折り返し電話をさせていただくときのために発信番号を通知いただいております。なお、個人情報を適切に管理し、修理業務等を委託する場合や正当な理由がある場合を除き、第三者に開示・提供いたしません。個人情報に関するお問い合わせは、ご相談いただきました窓口にご連絡ください。

パナソニック コネクト株式会社

パナソニック エンターテインメント＆コミュニケーション株式会社

〒812-8531 福岡県福岡市博多区美野島四丁目1番62号