

# レコーダーの第三者アクセス防止のため 初期ユーザー名/パスワードを変更してください

ネットワークディスクレコーダーはインターネット経由でアクセスできるように設定できます。第三者からの意図しないアクセスによるプライバシーや肖像権の侵害、情報漏えいなどを未然に防止するために、必ず以下の設定を行ってください。

- ①カメラに設定したユーザー名/パスワードをレコーダーに設定する
- ②管理者ユーザー名/パスワードを初期設定から変更する
- ③ユーザー認証が On であることを確認する（工場出荷時は On です）

## ①の設定手順（詳しい設定手順は、取扱説明書をお読みください）

- 準備：1. メインモニター画面で、マウスを使って操作する。  
2. [設定] ⇒ [カメラ] ⇒ 「登録情報の変更」横の [設定 >] ボタンの順にクリックして登録情報の変更画面を表示する。

### 登録情報の変更画面

カメラ	品番	アドレス	伝送方式	ユーザー名	パスワード	カメラ番号
1						JOBO
2						JOBO
3						JOBO
4						JOBO
5						JOBO
6						JOBO
7						JOBO
8						JOBO
9						JOBO
10						JOBO
11						JOBO
12						JOBO
13						JOBO
14						JOBO
15						JOBO
16						JOBO

カメラごとのユーザー名/パスワードを設定する

⇒すべてのカメラの入力を完了した後に「OK」ボタンをクリック

※新規にカメラを登録する場合、カメラ品番を選択またはカメラ検出を行うとユーザー名/パスワードの初期値が自動的に入力されますので、カメラに設定されているユーザー名/パスワードに合わせて入力しなおしてください。

## ②の設定手順（詳しい設定手順は、取扱説明書をお読みください）

- 準備：1. メインモニター画面で、マウスを使って操作する。  
2. [設定] ⇒ [詳細設定] ⇒ [ユーザー管理] ⇒ [管理者設定] タブの順にクリックして管理者設定画面を表示する。

### 管理者設定画面

管理者情報の変更	
管理者名	ADMIN
パスワード	*****
パスワード(再入力)	*****

管理者ユーザー名/パスワードを変更する

⇒入力後に「変更」ボタンをクリック

## 管理者ユーザー名/パスワード設定時のお願い

- ・容易に推測されない文字と数字の組み合わせで設定してください。  
「11111」などの連続する数字や文字、関係者の生年月日や電話番号は避けてください。
- ・ユーザー名/パスワードは定期的に変更してください。
- ・設定したユーザー名/パスワードは必ず控えておいてください。
- ・管理者が不明のユーザー名は削除してください。

## 管理者ユーザー名/パスワードを変更後は

本機に接続している機器に登録している管理者ユーザー名/パスワードも変更してください。  
製品ごとの設定手順は、お使いの製品の取扱説明書をお読みください。

# Prevent unexpected access to the recorder

## Change the default user name and password

Network disk recorder can be configured to be accessed from the Internet. However, depending on how the recorders are configured, they may be unexpectedly accessed by the third party, which may cause infringement of privacy rights, leaking of information, and other issues.

If you connect a recorder to the Internet, make sure to configure the following settings.


- ① **Set user name and password, which have been set to camera, to recorder**
- ② **Change the default administrator name and password to new one**
- ③ **Make sure that the user authentication is set to "On" (factory default is "On")**

### Configuration example for above ①

(Refer to the operating instructions provided with your recorder for further information about the settings)

- Preparation 1. Operate by using a mouse on the main monitor.  
2. Click [Setup] > [Camera] > [Setup >] button next to [Registered information] to display the registered information screen.

#### Registered information screen

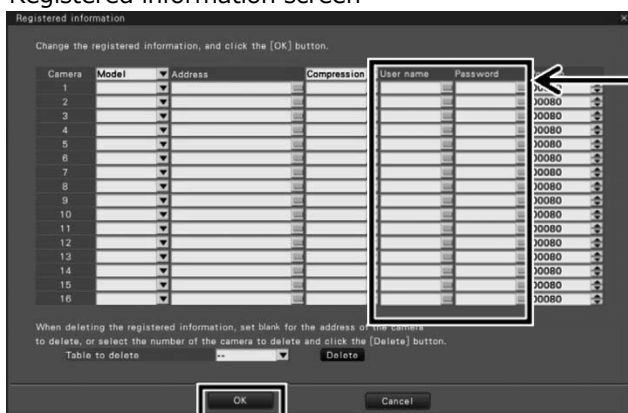

#### Register a new user name and password for each camera

After completing the input of all cameras, click the [OK] button.


\*When you register a new camera, and select the model number of the camera, or perform the camera detection, the default user name and password will be entered automatically. Please re-enter the user name and password that has been registered the camera.

### Configuration example for above ②

(Refer to the operating instructions provided with your recorder for further information about the settings)

- Preparation 1. Operate by using a mouse on the main monitor.  
2. Click [Setup] > [Advanced setup] > [User Management] > [Administrator setup] tab to display the administrator setup screen.

#### Administrator setup screen

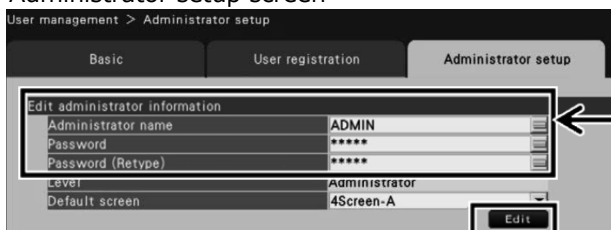

#### Change the administrator name and password

After changing the administrator name and password, click [Edit] button.

### Cautions for administrator names and passwords

- **Use a combination of characters and numbers that is difficult to guess.**  
Avoid using a string of the same characters, such as "11111", birth dates, or telephone numbers.
- **Change user names and passwords periodically.**
- **Make sure to manage the configured user names and passwords.**
- **Delete all user names that do not have an assigned user.**

### After changing the administrator name and password

Also change the administrator names and passwords registered to the products which are connected to the recorder.

Refer to the operating instructions provided with your product for further information about the settings used for your product.